

# ***FM Stereo FM/AM Receiver***

---

## **Operating Instructions**

### **Owner's Record**

The model and serial numbers are located on the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

## ***STR-DE598***

## WARNING

### To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.


To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.



Don't throw away batteries with general house waste; dispose of them correctly as chemical waste.

### For customers in the United States

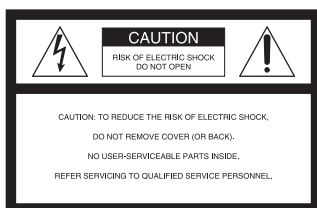

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

### Note to CATV system installer:

This reminder is provided to call CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### For customers in Canada

## CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

### For customers in the United States, Canada and Australia




ENERGY STAR<sup>®</sup> is a U.S. registered mark. As an ENERGY STAR<sup>®</sup> partner, Sony Corporation has determined that this product meets the ENERGY STAR<sup>®</sup> guidelines for energy efficiency.

## About This Manual

- The instructions in this manual are for model STR-DE598. Check your model number by looking at the lower right corner of the front panel. In this manual, the models of area code U is used for illustration purposes unless stated otherwise.
- The instructions in this manual describe the controls on the receiver. You can also use the controls on the supplied remote if they have the same or similar names as those on the receiver. For details on the use of your remote, see pages 44–47.

### About area codes

The area code of the receiver you purchased is shown on the lower portion of the rear panel (see the illustration below).

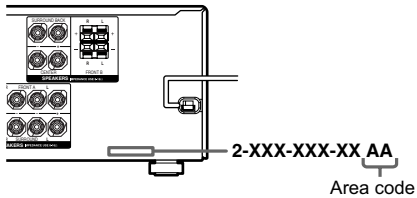

Any differences in operation, according to the area code, are clearly indicated in the text, for example, "Models of area code AA only".

This receiver incorporates Dolby\* Digital and Pro Logic Surround and the DTS\*\* Digital Surround System.

- \* Manufactured under license from Dolby Laboratories.  
"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.
- \*\* "DTS", "DTS-ES", "Neo:6" and "DTS 96/24" are trademarks of Digital Theater Systems, Inc.

# Table of Contents

---

## Getting Started

- 1: Check how to hookup your components ..... 5
  - 1a: Connecting components with digital audio output jacks ..... 7
  - 1b: Connecting components with multi channel output jacks..... 10
  - 1c: Connecting components with only analog audio jacks ..... 12
- 2: Connecting the antennas ..... 14
- 3: Connecting speakers ..... 15
- 4: Connecting the AC power cord ..... 17
- 5: Setting up the speakers ..... 18
- 6: Adjusting the speaker levels and balance ..... 21
  - TEST TONE

---

## Amplifier Operation

- Selecting the component ..... 22
- Listening to multi channel sound ..... 23
  - MULTI CH IN
- Listening to FM/AM radio ..... 23
- Storing FM stations automatically ..... 24
  - AUTOBETICAL  
(Models of area code CEL, CEK only)
- Presetting radio stations ..... 25
- Using the Radio Data System (RDS) .... 26
  - (Models of area code CEL, CEK only)
- Changing the display ..... 27
- About the indications in the display ..... 28

---

## Enjoying Surround Sound

- Using only the front speakers ..... 30
- Enjoying higher fidelity sound ..... 30
  - AUTO FORMAT DIRECT
- Selecting a sound field ..... 32
- Selecting the surround back decoding mode ..... 34
  - SURR BACK DECODING

---

## Advanced Adjustments and Settings

- Assigning the component video input .. 36
  - COMPONENT VIDEO  
INPUT ASSIGN  
(Except for models of area code CEL, CEK)
- Switching the audio input mode for digital components ..... 36
  - INPUT MODE
- Customizing sound fields ..... 37
- Adjusting the tone ..... 38
- Advanced settings ..... 39

---

## Other Operations

- Naming preset stations and inputs ..... 41
- Using the Sleep Timer ..... 42
- Selecting the speaker system ..... 42
- Recording ..... 43

---

## Operations Using the Remote RM-AAU001

- Before you use your remote ..... 44
- Remote button description ..... 44
- Changing the factory setting of an input button ..... 47

---

## Additional Information

- Precautions ..... 48
- Troubleshooting ..... 49
- Specifications ..... 51
- List of button locations and reference pages ..... 55
- Index ..... Back page

## Getting Started

## 1: Check how to hookup your components

Steps 1a through 1c beginning on page 7 describe how to hook up your components to this receiver. Before you begin, refer to “Connectable components” below for the pages which describe how to connect each component.

After hooking up all your components, proceed to “2: Connecting the antennas” (page 14).

## Connectable components

Component to be connected	Page
DVD player	
With digital audio output <sup>a)</sup>	7–8
With multi channel audio output <sup>b)</sup>	10–11
With analog audio output only <sup>c)</sup>	7–8
TV monitor	
With component video input <sup>d)</sup>	8 or 11
With composite video input only	13
Satellite tuner	
With digital audio output <sup>a)</sup>	7–8
With analog audio output only <sup>c)</sup>	7–8
Super Audio CD/CD player	
With digital audio output <sup>a)</sup>	9
With multi channel audio output <sup>b)</sup>	10
With analog audio output only <sup>c)</sup>	12
MD/Tape deck	
With analog audio output only <sup>c)</sup>	12
Multi channel decoder	10
VCR, camcorder, video game, etc.	13

<sup>a)</sup> Model with a DIGITAL OPTICAL OUTPUT or DIGITAL COAXIAL OUTPUT jack, etc.

<sup>b)</sup> Model with MULTI CH OUTPUT jacks, etc. This connection is used to output the audio decoded by the component's internal multi channel decoder through this receiver.

<sup>c)</sup> Model equipped only with AUDIO OUT L/R jacks, etc.

<sup>d)</sup> Model with component video (Y, P<sub>B</sub>/C<sub>B</sub>/B-Y, P<sub>R</sub>/C<sub>R</sub>/R-Y) input jacks.

## Required cords

The hookup diagrams on the subsequent pages assume the use of the following optional connection cords (**A** to **G**) (not supplied).

### **A** Audio cord

White (L)  
Red (R)



### **B** Audio/video cord

Yellow (video)  
White (L/audio)  
Red (R/audio)



### **C** Video cord

Yellow



### **D** Optical digital cord



### **E** Coaxial digital cord



### **F** Monaural audio cord

Black



### **Tip**

Audio cord **A** can be torn into two monaural audio cords **F**.

### **G** Component video cord

(Except for models of area code CEL, CEK)

Green  
Blue  
Red



## Notes


- Turn off the power to all components before making any connections.
- Be sure to make connections firmly to avoid hum and noise.
- When connecting an audio/video cord, be sure to match the color-coded pins to the appropriate jacks on the components: yellow (video) to yellow; white (left, audio) to white; and red (right, audio) to red.
- When connecting optical digital cords, insert the cord plugs straight in until they click into place.
- Do not bend or tie optical digital cords.

# 1a: Connecting components with digital audio output jacks

## Hooking up a DVD player, TV monitor or satellite tuner

For details on the required cords (**A–G**), see page 6.


### 1 Connect the audio jacks.

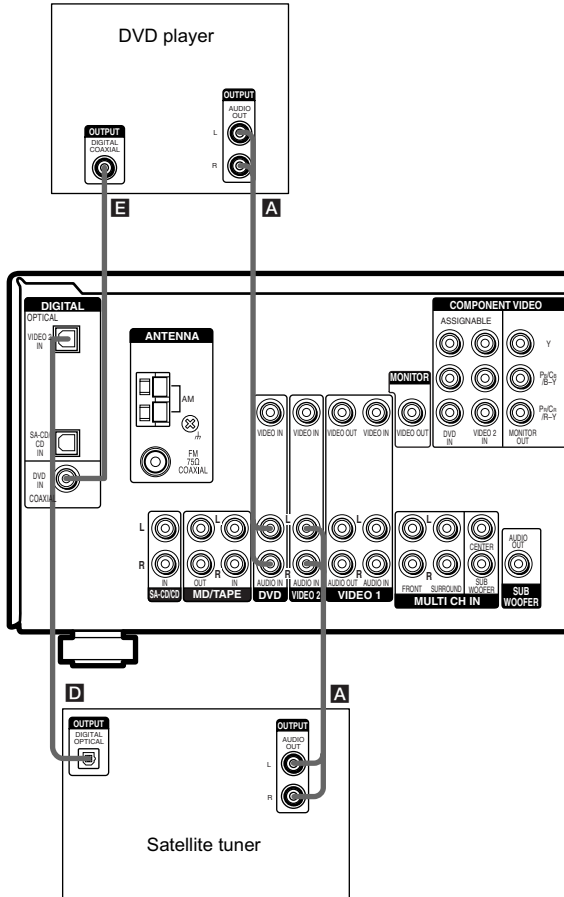

### Note

You can also listen to the sound of your TV by connecting your TV's audio output jacks to the VIDEO 2 AUDIO IN jacks on the receiver. In this case, do not connect the TV's video output jack to the VIDEO 2 VIDEO IN jack on the receiver.

 
(Except for models of area code CEL, CEK) The following illustration shows how to connect a TV or satellite tuner and a DVD player with COMPONENT VIDEO (Y, P<sub>B</sub>/C<sub>B</sub>/B-Y, P<sub>R</sub>/C<sub>R</sub>/R-Y) output jacks. Connecting a TV with component video input jacks allows you to enjoy higher quality video.





## Hooking up a Super Audio CD/CD player

For details on the required cords (**A–G**), see page 6.

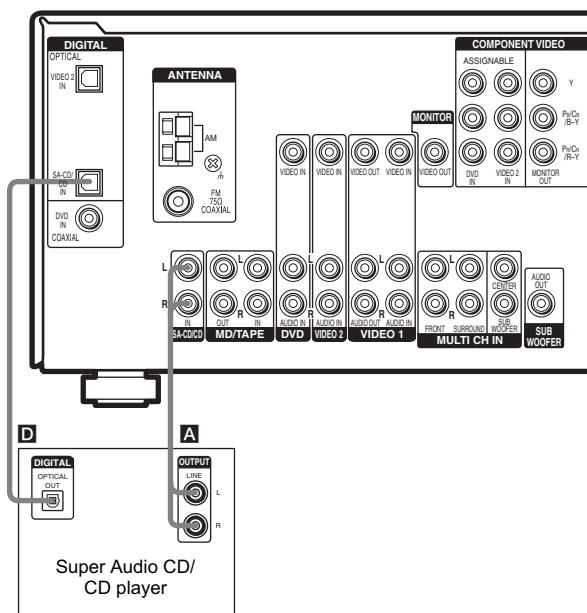

### Tip

All the digital audio jacks are compatible with 32 kHz, 44.1 kHz, 48 kHz and 96 kHz sampling frequencies.


### Note

The sound is not output when you play a Super Audio CD on the Super Audio CD player connected to the SA-CD/CD OPTICAL IN jack on this receiver. Connect to the analog input jacks (SA-CD/CD IN jacks). Refer to the operating instructions supplied with the Super Audio CD player.

# 1b: Connecting components with multi channel output jacks

## 1 Connect the audio jacks.

If your DVD or Super Audio CD player is equipped with multi channel output jacks, you can connect it to this receiver's MULTI CH IN jacks to enjoy the multi channel sound. Alternatively, the multi channel input jacks can be used to connect an external multi channel decoder. For details on the required cords (**A-G**), see page 6.

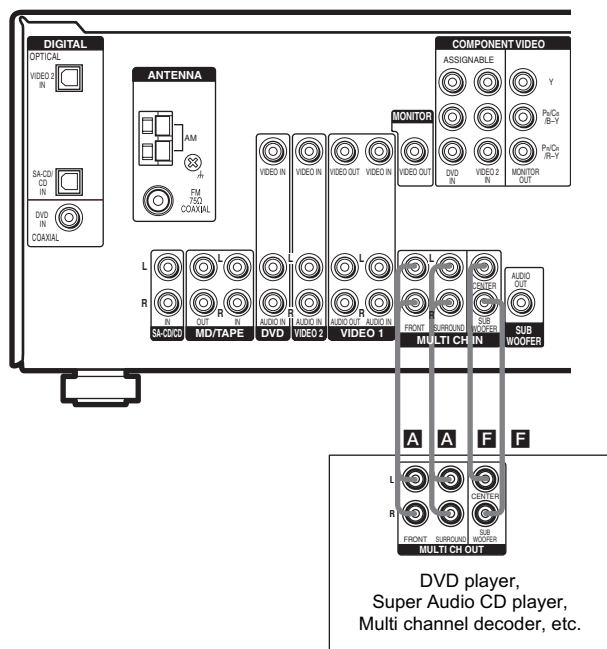

### Tip


This connection also allows you to enjoy software with multi channel audio recorded in formats other than the Dolby Digital and DTS.

### Note

When you make connections to the MULTI CH IN jacks, you will need to adjust the level of the speakers and sub woofer using the controls on the connected component.

## 2 Connect the video jacks.

(Except for models of area code CEL, CEK) The following illustration shows how to connect a DVD player with COMPONENT VIDEO (Y, P<sub>B</sub>/C<sub>B</sub>/B-Y, P<sub>R</sub>/C<sub>R</sub>/R-Y) output jacks. Connecting a TV with component video input jacks allows you to enjoy higher quality video.

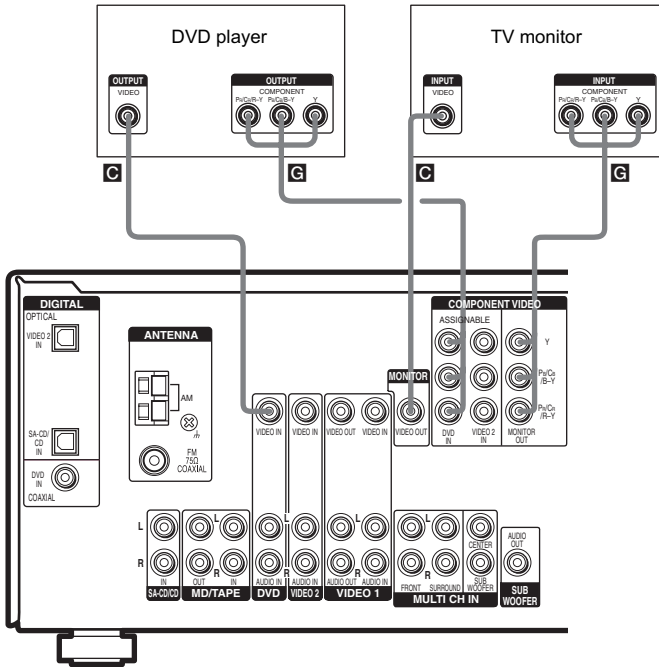


### Note

On this receiver, the standard video signals cannot be converted to component video signals (or vice versa).

# 1c: Connecting components with only analog audio jacks

## Hooking up audio components


For details on the required cords (**A–G**), see page 6.

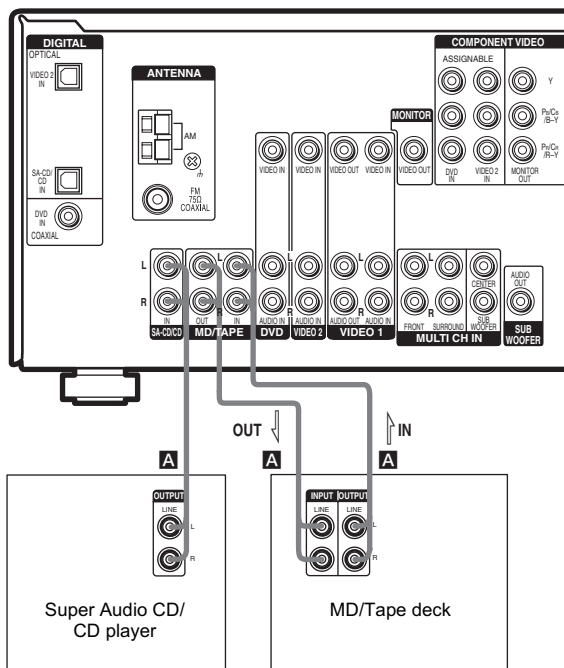



## 2: Connecting the antennas

Connect the supplied AM loop antenna and FM wire antenna.

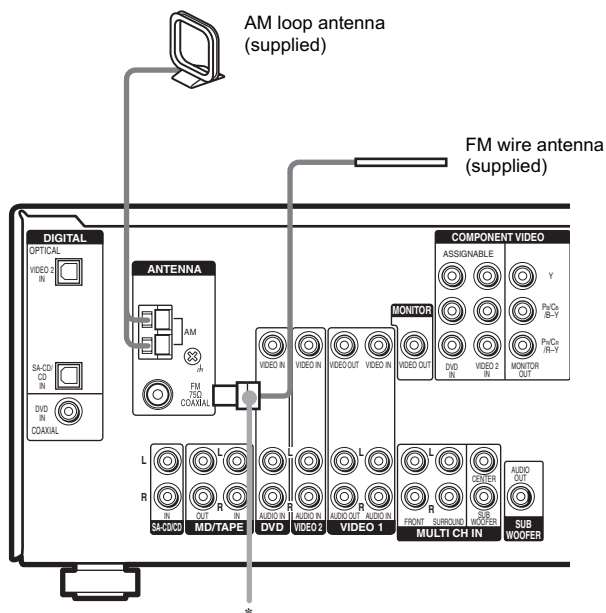

\* The shape of the connector varies depending on the area code.

### Notes


- To prevent noise pickup, keep the AM loop antenna away from the receiver and other components.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

### 3: Connecting speakers

Connect your speakers to the receiver. This receiver allows you to use a 6.1 channel speaker system. To fully enjoy theater-like multi channel surround sound requires five speakers (two front speakers, a center speaker, and two surround speakers) and a sub woofer (5.1 channel).

You can enjoy high fidelity reproduction of DVD software recorded in the Surround EX format if you connect one additional surround back speaker (6.1 channel) (see “Selecting the surround back decoding mode” on page 34).

#### Example of 6.1 channel speaker system configuration

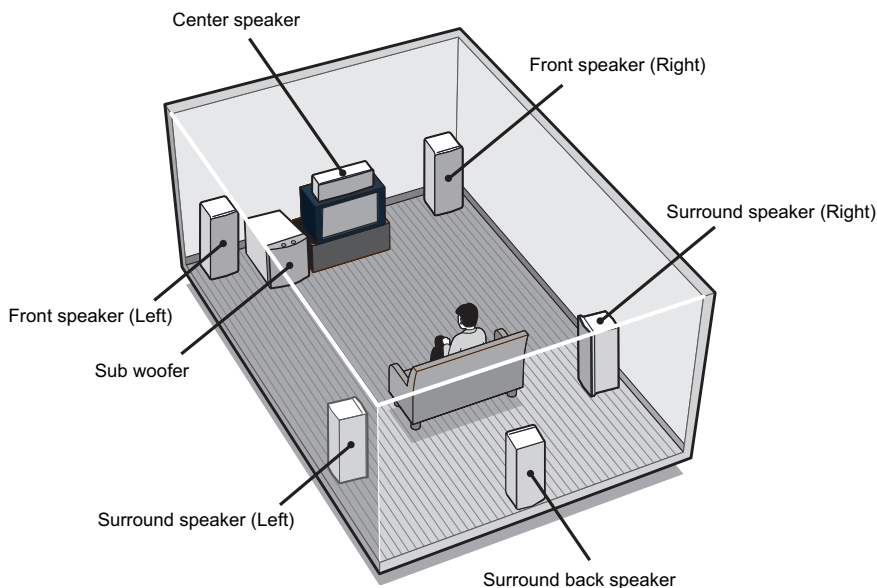

#### Tips

- When you connect 6.1 channel speaker system, place the surround back speaker behind the listening position.
- Since the sub woofer does not emit highly directional signals, you can place it wherever you want.

## Required cords


### A Speaker cords (not supplied)

(+)  
(-)



### B Monaural audio cord (not supplied)

Black

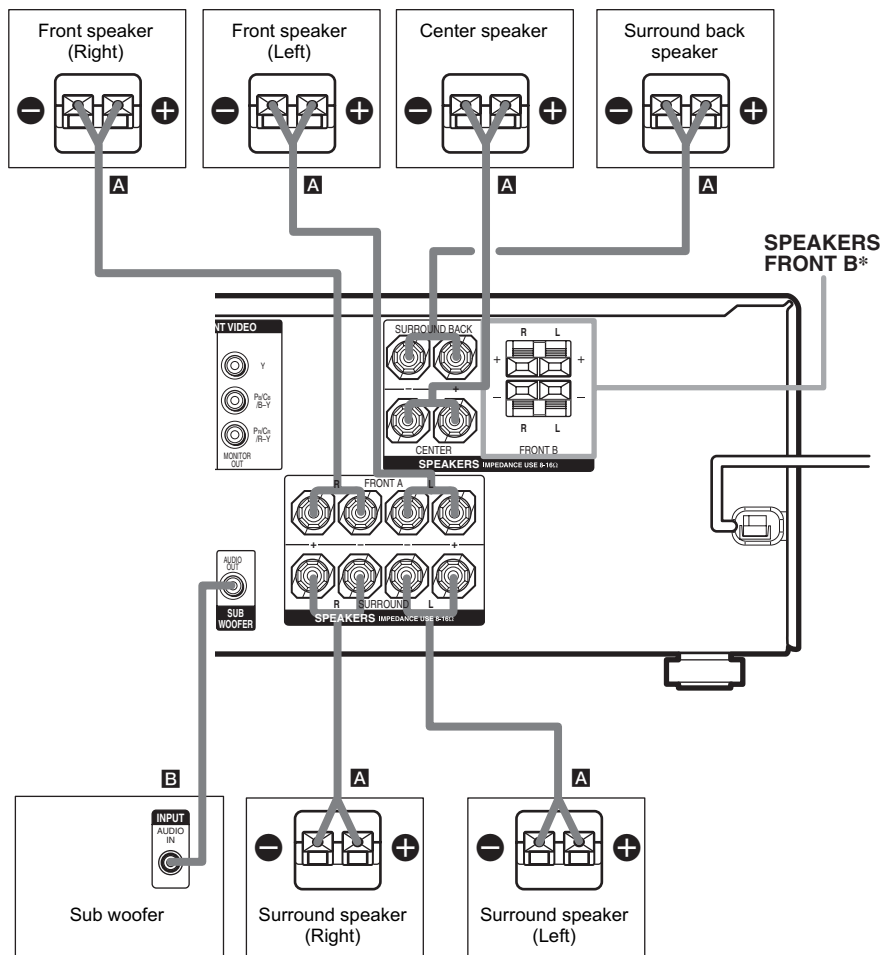


\* If you have an additional front speaker system, connect them to the SPEAKERS FRONT B terminals. You can select the front speakers you want to use with the SPEAKERS (OFF/A/B/A+B) button. For details, see “Selecting the speaker system” (page 42).



## 4: Connecting the AC power cord


### Setting the voltage selector

If your receiver has a voltage selector on the rear panel, check that the voltage selector is set to the local power supply voltage. If not, use a screwdriver to set the selector to the correct position before connecting the AC power cord to a wall outlet.

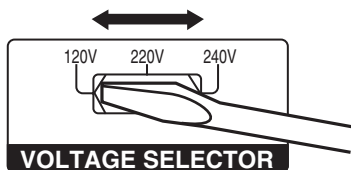

### Connecting the AC power cord

Connect the AC power cord to a wall outlet.

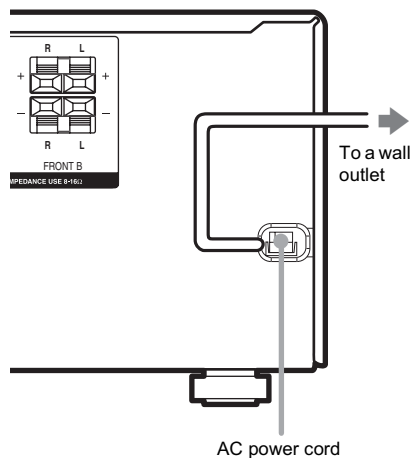

## Performing initial setup operations

Before using the receiver for the first time, initialize the receiver by performing the following procedure.

This procedure can also be used to return settings you have made to their factory defaults. Use the buttons on the receiver for the operation.

**1 Press I/⏻ to turn off the receiver.**

**2 Hold down I/⏻ for 5 seconds.**

“PUSH” and “ENTER” appears in the display alternately.

**3 Press ENTER.**

“CLEARING” appears in the display for a while, then “CLEARED” appears.

The following are reset to their factory settings.

- All settings in the SET UP, LEVEL, TONE and CUSTOMIZE menus.
- The sound field memorized for each input and preset station.
- All sound field parameters.
- All preset stations.
- All index names for inputs and preset stations.
- MASTER VOLUME -/+ is set to “VOL MIN”.
- Input is set to DVD.

## 5: Setting up the speakers

You can use the SET UP menu to set the size, distance and location of the speakers connected to this receiver.

- 1 Press I/⏻ to turn on the receiver.**
- 2 Press MAIN MENU repeatedly to select "<SET UP>".**
- 3 Press < or > repeatedly to select the parameter you want to adjust.**

For details, see "Speaker setup parameters" below.

### Note

Some speaker setup items may appear dimmed in the display. This means that they have been adjusted automatically due to other speaker settings or may not be adjustable.

- 4 Press + or – repeatedly to select the setting you want.**

The setting is entered automatically.

### Note

Press ENTER on the receiver if you select the setting for "SP. PAT. X –X".

- 5 Repeat steps 3 and 4 until you have set all of the items that follow.**

## Speaker setup parameters

The initial settings are underlined.

### ■ XXXX SET (Speaker easy setup)

- EASY

If you want to set up your speakers automatically, select "EASY SET". You can select a pre-defined speaker pattern (see the supplied "Easy Setup Guide").

- NORM

If you want to adjust the settings of each speaker manually, select "NORM SET".

### ■ SP. PAT. X –X (Speaker setup pattern)

When you select "EASY SET", select the speaker setup pattern. Press + or – repeatedly to select the speaker setup pattern and press ENTER to enter the selection. Check your speaker pattern using the supplied "Easy Setup Guide".

### ■ S.W. XXX (Sub woofer selection)

- YES

If you connect a sub woofer, select "YES".

- NO

If you did not connect a sub woofer, select "NO". The front speakers are automatically set to "LARGE" and you cannot change this setting. This activates the bass redirection circuitry and outputs the LFE signals from other speakers.

- In order to take full advantage of the Dolby Digital bass redirection circuitry, we recommend that you set the cut off frequency on the sub woofer as high as possible.

### ■ XXXXX (Front speakers size)

- LARGE

If you connect large speakers that will effectively reproduce bass frequencies, select "LARGE". Normally, select "LARGE".

- SMALL

If the sound is distorted, or you feel a lack of surround effects when using multi channel surround sound, select "SMALL" to activate the bass redirection circuitry and output the front channel bass frequencies from the sub woofer. When the front speakers are set to "SMALL", the center, surround and surround back speakers are also automatically set to "SMALL" (unless previously set to "NO").

### ■ XXXXX (Center speaker size)

- LARGE

If you connect a large speaker that will effectively reproduce bass frequencies, select "LARGE". Normally, select "LARGE". However, if the front speakers are set to "SMALL", you cannot set the center speaker to "LARGE".

- SMALL

If the sound is distorted, or you feel a lack of surround effects when using multi channel surround sound, select "SMALL" to activate the bass redirection circuitry and output the center channel bass frequencies from the front speakers (if set to "LARGE") or sub woofer.<sup>a)</sup>

- NO

If you did not connect a center speaker, select "NO". The sound of the center channel will be output from the front speakers.<sup>b)</sup>

## ■ XXXXX (Surround speakers size)

### • LARGE

If you connect large speakers that will effectively reproduce bass frequencies, select “LARGE”. Normally, select “LARGE”.

However, if the front speakers are set to “SMALL”, you cannot set the surround speakers to “LARGE”.

### • SMALL

If the sound is distorted, or you feel a lack of surround effects when using multi channel surround sound, select “SMALL” to activate the bass redirection circuitry and output the surround channel bass frequencies from the sub woofer or other “LARGE” speakers.

### • NO

If you did not connect surround speakers, select “NO”.<sup>c)</sup>

## ■ XXX (Surround back speaker selection)

### • YES

If you connect a surround back speaker, select “YES”.

### • NO

If you did not connect surround back speaker, select “NO”.

## Tips

- a)–c) correspond to the following Dolby Pro Logic modes

- NORMAL
- PHANTOM
- 3 STEREO

- The “LARGE” and “SMALL” settings for each speaker determine whether the internal sound processor will cut the bass signal from that channel. When the bass is cut from a channel, the bass redirection circuitry sends the corresponding bass frequencies to the sub woofer or other “LARGE” speakers.

However, since bass sounds have a certain amount of directionality, it is best not to cut them, if possible. Therefore, even when using small speakers, you can set them to “LARGE” if you want to output the bass frequencies from that speaker. On the other hand, if you are using a large speaker, but prefer not to have bass frequencies output from that speaker, set it to “SMALL”.


If the overall sound level is lower than you prefer, set all speakers to “LARGE”. If there is not enough bass, you can use the BASS parameter in the TONE menu to boost the bass levels. To adjust the bass, see page 38.

## ■ DIST. X.X m (XX ft.) (Front speaker distance)

Initial setting: 3.0 m (10 ft.)

Lets you set the distance from your listening position to the front speakers (A). You can adjust from 1.0 meter to 7.0 meters (3 to 23 feet) in 0.1 meter (1 foot) steps.

If both front speakers are not placed an equal distance from your listening position, set the distance to the closest speaker.

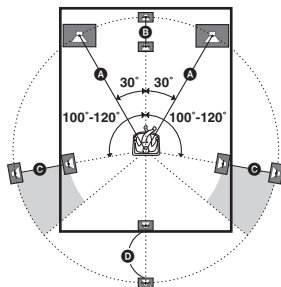

## ■ DIST. X.X m (XX ft.) (Center speaker distance)

Initial setting: 3.0 m (10 ft.)

Lets you set the distance from your listening position to the center speaker. Center speaker distance should be set from a distance equal to the front speaker distance (A) to a distance 1.5 meters (5 feet) closer to your listening position (B).

## ■ DIST. X.X m (XX ft.) (Surround speaker distance)

Initial setting: 3.0 m (10 ft.)

Lets you set the distance from your listening position to the surround speakers. Surround speaker distance should be set from a distance equal to the front speaker distance (A) to a distance 4.5 meters (15 feet) closer to your listening position (C).

If both surround speakers are not placed an equal distance from your listening position, set the distance to the closest speaker.

## ■ DIST. X.X m (XX ft.) (Surround back speaker distance)

Initial setting: 3.0 m (10 ft.)

Lets you set the distance from your listening position to the surround back speaker. Surround back speaker distance should be set from a distance equal to the front speaker distance (A) to a distance 4.5 meters (15 feet) closer to your listening position (D).

## Tip

The receiver lets you to input the speaker position in terms of distance. However, it is not possible to set the center speaker further than the front speakers. Also, the center speaker cannot be set more than 1.5 meters (5 feet) closer than the front speakers.

Likewise, the surround speakers cannot be set further away from the listening position than the front speakers. And they can be no more than 4.5 meters (15 feet) closer.

This is because incorrect speaker placement is not conducive to the enjoyment of surround sound.

Please note that, setting the speaker distance closer than the actual location of the speakers will cause a delay in the output of the sound from that speaker. In other words, the speaker will sound like it is further away.



For example, setting the center speaker distance 1–2 meters (3–6 feet) closer than the actual speaker position will create a fairly realistic sensation of being “inside” the screen. If you cannot obtain a satisfactory surround effect because the surround speakers are too close, setting the surround speaker distance closer (shorter) than the actual distance will create a larger sound stage.

Adjusting these parameter while listening to the sound often results in much better surround sound. Give it a try!



## (Surround speaker position)\*

Lets you specify the location of your surround speakers for proper implementation of the surround effects in the Cinema Studio EX modes (page 32).

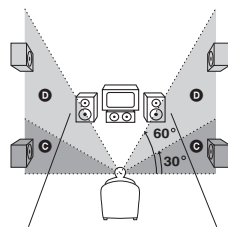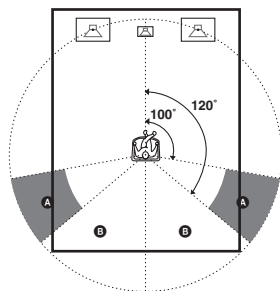

- SIDE/LO

Select if the location of your surround speakers corresponds to section **A** and **C**.

- SIDE/HI

Select if the location of your surround speakers corresponds to section **A** and **D**.

- BEHD/LO

Select if the location of your surround speakers corresponds to section **B** and **C**.

- BEHD/HI

Select if the location of your surround speakers corresponds to section **B** and **D**.

\* This setup item is not available when the surround speakers size parameter is set to “NO”.

**Tip**

Surround speaker position is designed specifically for implementation of the Cinema Studio EX modes.

For other sound fields, speaker position is not so critical. Those sound fields were designed under the premise that the surround speakers would be located behind the listening position, but presentation remains fairly consistent even with the surround speakers positioned at a rather wide angle. However, if the speakers are pointing toward the listener from the immediate left and right of the listening position, the surround effects becomes unclear unless set to “SIDE/LO” or “SIDE/HI”.

Nevertheless, each listening environment has many variables, such as wall reflections, and you may obtain better results using “BEHD/HI” if your speakers are located high above the listening position, even if they are to the immediate left and right.

Therefore, although it may result in a setting contrary to the above explanation, we recommend that you playback multi channel surround encoded software and select the setting that provides a good sense of spaciousness and that best succeeds in forming a cohesive space between the surround sound from the surround speakers and the sound of the front speakers. If you are not sure which sounds best, select “BEHD/LO” or “BEHD/HI” and then use the speaker distance parameter and speaker level adjustments to obtain proper balance.

**■ SP > XXX Hz**  
**(Speaker crossover frequency)\***

Initial setting: 100 Hz

Lets you adjust the bass crossover frequency of speakers in SET UP menu. You can adjust the bass crossover frequency from 40 Hz to 160 Hz in 9 steps.

\* This setup item is only available when at least one speaker is set to “SMALL” and the corresponding speaker segment flashes in the display.

## 6: Adjusting the speaker levels and balance

### — TEST TONE

Adjust the speaker levels and balance while listening to the test tone from your listening position. Use the remote for the operation.

**Tip**

The receiver employs a test tone with a frequency centered at 800 Hz.

**1 Press I/⏻ to turn on the receiver.**

**2 Press TEST TONE.**

“T. TONE” appears in the display and the test tone is output from each speaker in sequence.

Front (left) → Center → Front (right) → Surround (right) → Surround back → Surround (left) → Sub woofer

**3 Adjust the speaker levels and balance using the LEVEL menu so that the level of the test tone sounds the same from each speaker.**

For details on the LEVEL menu settings, see page 37.

**Tips**

- To adjust the level of all speakers at the same time, press MASTER VOL +/- on the remote or turn MASTER VOLUME +/- on the receiver.
- The adjusted value are shown in the display during adjustment.

**4 Press TEST TONE again after adjustment.**

The test tone turns off.

**Notes**

- The test tone cannot be used when MULTI CH IN function is used.
- Although these adjustments can also be made via the front panel using the LEVEL menu (when the test tone is output, the receiver switches to the LEVEL menu automatically), we recommend you follow the procedure described above and adjust the speaker levels from your listening position using the remote.

## Amplifier Operation

### Selecting the component

#### 1 Press input buttons to select the input.

To select the	Press
VCR	VIDEO 1
Satellite tuner	VIDEO 2
Camcorder or video game	VIDEO 3
DVD player	DVD
MD or tape deck	MD/TAPE
Super Audio CD or CD player	SA-CD/CD
Built-in tuner (FM)	FM
Built-in tuner (AM)	AM

The selected input appears in the display.

#### 2 Turn on the component and start playback.

##### Note

If you select any video components, set the TV's video input to match the component you selected.

#### 3 Turn MASTER VOLUME $\pm$ to adjust the volume.

##### Note

To avoid damaging your speakers, make sure that you turn down the volume before you turn off the receiver.

### To mute the sound

Press MUTE on the remote.

The muting function will be canceled when you do the following.

- Press MUTE on the remote again.
- Turn the power off.
- Increase the volume.

### To use the headphones

Connect the headphones to the PHONES jack.

- When the headphones are connected, speaker output is automatically canceled and "SP A" and "SP B" do not light up in the display.
- When the headphones are connected, you can select only the following sound fields (page 33).
  - HP 2CH (HEADPHONE 2CH)
  - HP MULTI (HEADPHONE MULTI)
  - HP THEA (HEADPHONE THEATER)

## Listening to multi channel sound

### — MULTI CH IN

You can select the audio directly from the components connected to the MULTI CH IN jacks. This enables you to enjoy high quality analog inputs such as DVD or Super Audio CD. When MULTI CH IN is selected, the tone and sound field cannot be used.

#### Press MULTI CH IN.

Press again to cancel the MULTI CH IN function.

## When MULTI CHANNEL DECODING indicator lights up

The MULTI CHANNEL DECODING indicator lights up when the receiver is decoding multi channel sources.

However, this indicator does not light up if you select 2CH STEREO mode.

## Listening to FM/AM radio

You can listen to FM and AM broadcasts through the built-in tuner. Before operation, make sure you have connected the FM and AM antennas to the receiver (see page 14).

#### Tip

The tuning scale differs depending on the area code as shown in the following table. For details on area codes, see page 3.

Area code	FM	AM
U, CA	100 kHz	10 kHz*
CEL, CEK, TW, KR, AU	50 kHz	9 kHz
E2/E3	50 kHz	9 kHz*
AR	50 kHz	10 kHz

\* The AM tuning scale can be changed (see page 53).

## Automatic tuning

If you do not know the frequency of the station you want, you can let the receiver scan all available stations in your area.

### 1 Press FM or AM to select the FM or AM band.

The last received station is tuned in.

### 2 Press TUNING + or TUNING –.

Press TUNING + to scan from low to high; press TUNING – to scan from high to low.

The receiver stops scanning whenever a station is received.

#### Tip

If “STEREO” flashes in the display and the FM stereo reception is poor, press FM MODE to change to monaural (MONO). You will not be able to enjoy the stereo effect, but the sound will be less distorted. To return to stereo mode, press FM MODE again.

## Direct tuning

You can enter the frequency of the station you want directly. Use the remote for the operation.

- 1 Press TUNER repeatedly to select the FM or AM band.**

The last received station is tuned in.

### Tip

You can also use FM or AM button on the receiver.

- 2 Press D.TUNING.**
- 3 Press the numeric buttons to enter the frequency.**

Example 1: FM 102.50 MHz

Press 1 ➔ 0 ➔ 2 ➔ 5 ➔ 0

Example 2: AM 1,350 kHz

Press 1 ➔ 3 ➔ 5 ➔ 0

(You do not have to enter the last “0” when the tuning scale is set to 10 kHz.)

If you have tuned in an AM station, adjust the direction of the AM loop antenna for optimum reception.

## If you cannot tune in a station and the entered numbers flash

Make sure you have entered the right frequency. If not, repeat steps 2 and 3. If the entered numbers still flash, the frequency is not used in your area.

## Storing FM stations automatically

### — AUTOBETICAL

#### (Models of area code CEL, CEK only)

This function lets you store up to 30 FM and FM RDS stations in alphabetical order without redundancy. Additionally, it only stores the stations with the clearest signals.

If you want to store FM or AM stations one by one, see “Presetting radio stations” (page 25) . Use the buttons on the receiver for the operation.

- 1 Press I/⏻ to turn off the receiver.**
- 2 Hold down MEMORY and press I/⏻ to turn the receiver back on.**

“AUTO-BETICAL SELECT” appears in the display and the receiver scans and stores all the FM and FM RDS stations in the broadcast area.

For RDS stations, the tuner first checks for stations broadcasting the same program, then stores only the one with the clearest signal. The selected RDS stations are sorted alphabetically by their Program Service name, then assigned a 2-character preset code. For more details on RDS, see page 26.

Regular FM stations are assigned 2-character preset codes and stored after the RDS station.

When done, “FINISH” appears in the display momentarily and the receiver returns to the normal operation.

### Notes

- Do not press any button on the receiver or supplied remote during autobetical operation, except I/⏻.
- If you move to another area, repeat this procedure to store stations in your new area.
- For details on tuning the stored stations, see “Tuning to preset stations” (page 25).
- If you move the antenna after storing stations with this procedure, the stored settings may no longer be valid. If this happens, repeat this procedure to store the stations again.



## Presetting radio stations

You can preset up to 30 FM or AM stations. Then you can easily tune in the stations you often listen to.

### Presetting radio stations

- 1 Press **FM** or **AM** to select the **FM** or **AM** band.

The last received station is tuned in.

 
- 2 Tune in the station that you want to preset using **automatic tuning** (page 23) or **direct tuning** (page 24).

- 3 Press **MEMORY**.

“MEMORY” appears in the display for a few seconds. Do steps 4 to 5 before the display goes out.

- 4 Press **PRESET TUNING +** or **PRESET TUNING –** repeatedly to select a preset station number.

Each time you press the button, you can select the preset station number as follows:



If “MEMORY” goes out before you select the preset station number, start again from step 3.

#### Tip

You can also use the remote to select a preset station number. Press **SHIFT** repeatedly to select a memory page (A, B or C) and then press the numeric buttons to select a preset number.

- 5 Press **MEMORY** again.

The station is stored to the selected preset number.

If “MEMORY” goes out before you press **MEMORY**, start again from step 3.

- 6 Repeat steps 2 to 5 to preset another station.

 
## Tuning to preset stations

- 1 Press **FM** or **AM** to select the **FM** or **AM** band.

The last received station is tuned in.

- 2 Press **PRESET TUNING +** or **PRESET TUNING –** repeatedly to select the preset station you want.

Each time you press the button, you can select the preset station as follows:



### Using the remote

- 1 Press **TUNER** repeatedly to select the **FM** or **AM** band.

- 2 Press **PRESET +** or **PRESET –** repeatedly to select the preset station you want.

### To select the preset station directly

Press the numeric buttons on the remote.

The preset station of the selected number in the current memory page is tuned in. Press **SHIFT** repeatedly on the remote to change the memory page.

# Using the Radio Data System (RDS)

## (Models of area code CEL, CEK only)

This receiver also allows you to use RDS (Radio Data System), which enables radio stations to send additional information along with the regular program signal. You can also display RDS information.

### Notes

- RDS is operable only for FM stations.
- Not all FM stations provide RDS service, nor do they provide the same types of services. If you are not familiar with the RDS services in your area, check with your local radio stations for details.

## Receiving RDS broadcasts

**Simply select a station on the FM band using automatic tuning (page 23), direct tuning (page 24), or preset tuning (page 25).**

When you tune in a station that provides RDS services, the RDS indicator lights up and the program service name appears in the display.

### Note

RDS may not work properly if the station you tuned to is not transmitting the RDS signal properly or if the signal strength is weak.

## Displaying RDS information

**While receiving an RDS station, press DISPLAY repeatedly.**

Each time you press the button, RDS information on the display changes cyclically as follows:

Program Service name → Frequency → Program Type indication<sup>a)</sup> → Radio Text indication<sup>b)</sup> → Current Time indication (in 24-hour system) → Sound field currently applied

<sup>a)</sup> Type of program being broadcast (see page 26).

<sup>b)</sup> Text messages sent by the RDS station.

### Notes

- If there is an emergency announcement by government authorities, "ALARM" flashes in the display.
- When the message consists of 9 characters or more, the message scrolls across the display.
- If a station does not provide a particular RDS service, "NO XXXX" (such as "NO TEXT") appears in the display.

## Description of program types

Program type indication	Description
NEWS	News programs
AFFAIRS	Topical programs that expand on current news
INFO	Programs offering information on a wide spectrum of subjects, including consumer affairs and medical advice
SPORT	Sports programs
EDUCATE	Educational programs, such as "how-to" and advice programs
DRAMA	Radio plays and serials
CULTURE	Programs about national or regional culture, such as language and social concerns
SCIENCE	Programs about the natural sciences and technology
VARIED	Other types of programs such as celebrity interviews, panel games, and comedy
POP M	Popular music programs
ROCK M	Rock music programs
EASY M	Easy Listening
LIGHT M	Instrumental, vocal, and choral music
CLASSICS	Performances of major orchestras, chamber music, opera, etc.
OTHER M	Music that does not fit into any categories above, such as Rhythm & Blues and Reggae
WEATHER	Weather information
FINANCE	Stock market reports and trading, etc.
CHILDREN	Programs for children
SOCIAL	Programs about people and the things that affect them

Program type indication	Description
RELIGION	Programs of religious content
PHONE IN	Programs where members of the public express their views by phone or in a public forum
TRAVEL	Programs about travel. Not for announcements that are located by TP/TA
LEISURE	Programs on recreational activities such as gardening, fishing, cooking, etc.
JAZZ	Jazz programs
COUNTRY	Country music programs
NATION M	Programs featuring the popular music of the country or region
OLDIES	Programs featuring oldies music
FOLK M	Folk music programs
DOCUMENT	Investigative features
NONE	Any programs not defined above

## Changing the display

### Changing the information in the display

You can check the sound field etc. by changing the information in the display.

#### Press DISPLAY repeatedly.

Each time you press DISPLAY, the display will change cyclically as follows:

Index name of the input\* → Selected input → Sound field currently applied

#### When the tuner is selected

Program Service name\*\* or preset station name\*  
 → Frequency → Program Type indication\*\*  
 → Radio Text indication\*\* → Current Time indication (in 24-hour system)\*\* → Sound field currently applied

\* Index name appears only when you have assigned one to the input or preset station (page 41). Index name does not appear when only blank spaces have been entered, or it is the same as the input name.


\*\* During RDS reception only. (Models of area code CEL, CEK only. See page 26.)

### Adjusting the brightness of the display

#### Press DIMMER repeatedly.

The brightness of the display will change in 3 steps.

## About the indications in the display

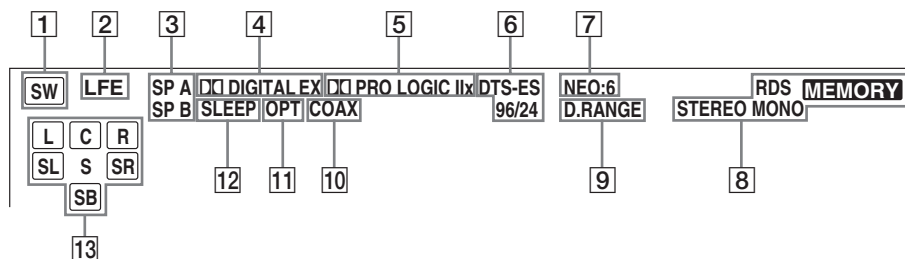

**1 SW:** Lights up when sub woofer selection is set to “YES” (page 18) and the audio signal is output from the SUB WOOFER jack.

**2 LFE:** Lights up when the disc being played back contains the LFE (Low Frequency Effect) channel and the LFE channel signal is actually being reproduced.

**3 SP A/SP B:** Lights up in accordance with the speaker system being used (A or B). Turns off when speaker output is turned off or when headphones are connected.

**4 DIGITAL EX:** “DIGITAL” lights up when the receiver is decoding signals recorded in the Dolby Digital format. “DIGITAL EX” lights up when the receiver is decoding signals recorded in the Dolby Digital EX format.

**5 PRO LOGIC IIx:** “PRO LOGIC” lights up when the receiver applies Pro Logic processing to 2 channel signals in order to output the center and surround channel signals. “PRO LOGIC II” lights up when the Pro Logic II Movie/Music/Game decoder is activated. “PRO LOGIC IIx” lights up when the Pro Logic IIx Movie/Music/Game decoder is activated. However, these indicators do not light up if both the center and surround speakers are set to “NO” and you select a sound field using the A.F.D. button.

### Note

Dolby Pro Logic IIx decoding does not function for DTS format signals or for signals with a sampling frequency of more than 48 kHz.

**6 DTS-ES 96/24:** “DTS” lights up when DTS signals are input. “DTS-ES” lights up when DTS-ES signals are input. “DTS 96/24” lights up when the receiver is decoding DTS 96 kHz/24 bit signals.

### Note

When playing a DTS format disc, be sure that you have made digital connections and that INPUT MODE is not set to “ANALOG” (page 36).

**7 NEO:6:** Lights up when DTS Neo:6 Cinema/Music mode decoding is activated.

**8 Tuner indicators:** Lights up when using the receiver to tune in radio stations, etc. See pages 23–27 for tuner operations.

### Note

“RDS” appears for models of area code CEL, CEK only.

**9 D.RANGE:** Lights up when dynamic range compression is activated (page 37).

**10 COAX:** Lights up when the source signal is a digital signal being input through the COAXIAL terminal.

**11 OPT:** Lights up when the source signal is a digital signal being input through the OPTICAL terminal.

**12 SLEEP:** Lights up when sleep timer is activated.

- 13 Playback channel indicators:** The letters (L, C, R, etc.) indicate the channels being played back. The boxes around the letters vary to show how the receiver downmixes the source sound (based on the speakers settings).

L (Front Left), R (Front Right), C (Center (monaural)), SL (Surround Left), SR (Surround Right), S (Surround (monaural or the surround components obtained by Pro Logic processing)), SB (Surround Back (the surround back components obtained by 6.1 channel decoding))

**Example:**

Recording format (Front /Surround): 3/2

Output channel: When the surround speakers size parameter is set to “NO”

Sound Field: A.F.D. AUTO

L	C	R
SL		SR

## Enjoying Surround Sound

### Using only the front speakers

In this mode, the receiver outputs the sound from the front left/right speakers only. There is no sound from the sub woofer.

### Listening to 2 channel stereo sources (2CH STEREO)

Standard 2 channel stereo sources completely bypass the sound field processing and multi channel surround formats are downmixed to 2 channel.

#### Press 2CH.

“2CH ST.” appears in the display and the receiver switches to the 2CH STEREO mode.

#### Note

No sound is output from the sub woofer in the 2CH STEREO mode. To listen to the 2 channel stereo sources using the front left/right speakers and a sub woofer, set to the A.F.D. mode.

## Enjoying higher fidelity sound

### — AUTO FORMAT DIRECT

The Auto Format Direct (A.F.D.) mode allows you to select the decoding mode you want for your audio sound.

A.F.D. mode (Display)	Decoding mode
A.F.D. AUTO (A.F.D. AUTO)	As encoded
PRO LOGIC (DOLBY PL)	Dolby Pro Logic
PRO LOGIC II MOVIE (PLII MV)	Dolby Pro Logic II
PRO LOGIC II MUSIC (PLII MS)	
PRO LOGIC II GAME (PLII GM)	
PRO LOGIC IIx MOVIE (PLIIX MV)	Dolby Pro Logic IIx
PRO LOGIC IIx MUSIC (PLIIX MS)	
PRO LOGIC IIx GAME (PLIIX GM)	
Neo:6 Cinema (NEO6 CIN)	DTS Neo:6
Neo:6 Music (NEO6 MUS)	
MULTI STEREO (MULTI ST.)	

## Decoding the input audio signal automatically

In this mode, the receiver automatically detects the type of audio signal being input (Dolby Digital, DTS, standard 2 channel stereo, etc.) and performs the proper decoding if necessary. This mode presents the sound as it was recorded/encoded, without adding any surround effects. However, if there are no low frequency signals (Dolby Digital LFE, etc.) it will generate a low frequency signal for output to the sub woofer.

**Press A.F.D. repeatedly to select “A.F.D. AUTO”.**

The receiver automatically detects the type of audio signal being input and performs the proper decoding if necessary.

## Enjoying stereo sound in multi channel (2 channel decoding mode)

This mode lets you specify the type of decoding for 2 channel audio sources. This receiver can reproduce 2 channel sound in 5 channels through Dolby Pro Logic II; 6 channels through Dolby Pro Logic IIx; 6 channels through DTS Neo:6 or 4 channels through Dolby Pro Logic. However, DTS 2CH sources are not decoded by DTS Neo:6; they are output in 2 channels.

**Press A.F.D. repeatedly to select the 2 channel decoding mode.**

The selected type of decoding appears in the display.

### ■ DOLBY PL (PRO LOGIC)

Performs Dolby Pro Logic decoding. The source recorded in 2 channel is decoded into 4.1 channels.

### ■ PLII MV (PRO LOGIC II MOVIE)

Performs Dolby Pro Logic II Movie mode decoding. This setting is ideal for movies encoded in Dolby Surround. In addition, this mode can reproduce sound in 5.1 channel when watching videos of overdubbed or old movies.

### ■ PLII MS (PRO LOGIC II MUSIC)

Performs Dolby Pro Logic II Music mode decoding. This setting is ideal for normal stereo sources such as CDs.

### ■ PLII GM (PRO LOGIC II GAME)

Performs Dolby Pro Logic II Game mode decoding. This setting is ideal for video game softwares.

### ■ PLIIX MV (PRO LOGIC IIx MOVIE)

Performs Dolby Pro Logic IIx Movie mode decoding. This setting expands Dolby Pro Logic II Movie or Dolby Digital 5.1 to discrete 6.1 movie channels.

### ■ PLIIX MS (PRO LOGIC IIx MUSIC)

Performs Dolby Pro Logic IIx Music mode decoding. This setting shares hard “back” effects across all surround speakers.

### ■ PLIIX GM (PRO LOGIC IIx GAME)

Performs Dolby Pro Logic IIx Game mode decoding. This setting delivers full-impact special effect signals panned to the surround speakers.

#### **Note**

Dolby Pro Logic IIx decoding does not function for DTS format signals or for signals with a sampling frequency of more than 48 kHz.

### ■ NEO6 CIN (Neo:6 Cinema)

Performs DTS Neo:6 Cinema mode decoding.

### ■ NEO6 MUS (Neo:6 Music)

Performs DTS Neo:6 Music mode decoding. This setting is ideal for normal stereo sources such as CDs.

### ■ MULTI ST. (MULTI STEREO)

Outputs the 2 channel left/right signals from all speakers. The sound of speakers may not output depending on the speakers settings.

## If you connect a sub woofer

When the audio signal is 2 channel stereo or if the source signal does not include a LFE signal, the receiver generates a low frequency signal for output to the sub woofer. However the low frequency signal is not generated for “NEO6 CIN” or “NEO6 MUS” when all speakers are set to “LARGE”.

## Selecting a sound field

You can take advantage of surround sound simply by selecting one of the receiver's pre-programmed sound fields. They bring the exciting and powerful sound of movie theaters and concert halls into your home.

### Selecting a sound field for movies

Press **MOVIE** repeatedly to select the sound field you want.

The selected sound field appears in the display.

Sound field	Display
CINEMA STUDIO EX A <b>DCS</b>	C.ST.EX A
CINEMA STUDIO EX B <b>DCS</b>	C.ST.EX B
CINEMA STUDIO EX C <b>DCS</b>	C.ST.EX C

### About DCS (Digital Cinema Sound)

Sound fields with **DCS** marks use DCS technology.

DCS is the concept name of the surround technology for home theater developed by Sony. DCS uses the DSP (Digital Signal Processor) technology to reproduce the sound characteristics of an actual cinema cutting studio in Hollywood.

When played at home, DCS will create a powerful theater effect that mimics the artistic combination of sound and action as envisioned by the movie director.

#### ■ C.ST.EX A (CINEMA STUDIO EX A) **DCS**

Reproduces the sound characteristics of the Sony Pictures Entertainment "Cary Grant Theater" cinema production studio. This is a standard mode, great for watching most any type of movies.

#### ■ C.ST.EX B (CINEMA STUDIO EX B) **DCS**

Reproduces the sound characteristics of the Sony Pictures Entertainment "Kim Novak Theater" cinema production studio. This mode is ideal for watching science-fiction or action movies with lots of sound effects.

#### ■ C.ST.EX C (CINEMA STUDIO EX C) **DCS**

Reproduces the sound characteristics of the Sony Pictures Entertainment scoring stage. This mode is ideal for watching musicals or films where orchestra music is featured in the soundtrack.

### About CINEMA STUDIO EX modes

CINEMA STUDIO EX modes are suitable for watching motion picture DVDs (etc.), with multi channel surround effects. You can reproduce the sound characteristics of Sony Pictures Entertainment's dubbing studio in your home.

The CINEMA STUDIO EX modes consist of the following three elements.

- Virtual Multi Dimension  
Creates 5 sets of virtual speakers from a single pair of actual surround speakers.
- Screen Depth Matching  
Creates the sensation that the sound is coming from inside the screen like in theaters.
- Cinema Studio Reverberation  
Reproduces the type of reverberation found in theaters.

The CINEMA STUDIO EX modes integrate these three elements simultaneously.

### Notes

- The effects provided by the virtual speakers may cause increased noise in the playback signal.
- When listening with sound fields that employ the virtual speakers, you will not be able to hear any sound coming directly from the surround speakers.



## Selecting a sound field for music

Press **MUSIC** repeatedly to select the sound field you want.

The selected sound field appears in the display.

Sound field	Display
HALL	HALL
JAZZ CLUB	JAZZ
LIVE CONCERT	CONCERT

### ■ HALL

Reproduces the acoustics of a classical concert hall.

### ■ JAZZ (JAZZ CLUB)

Reproduces the acoustics of a jazz club.

### ■ CONCERT (LIVE CONCERT)

Reproduces the acoustics of a 300-seat live house.

## When the headphones are connected

You can select only from the following sound fields.

### ■ HP 2CH (HEADPHONE 2CH)

Outputs the sound in 2 channel (stereo). Standard 2 channel stereo sources completely bypass the sound field processing and multi channel surround formats are downmixed to 2 channels.

### ■ HP MULTI (HEADPHONE MULTI)

Outputs the front analog signal from MULTI CH IN jacks.

### ■ HP THEA (HEADPHONE THEATER)



Allows you to experience a theater-like environment while listening through a pair of headphones.

### Note

If you connect a pair of headphones while a sound field is operating, the system will automatically switch to HEADPHONE 2CH if using a sound field selected with the 2CH or A.F.D. button, or to HEADPHONE THEATER if using a sound field selected with the MOVIE or MUSIC button.

## To turn off the surround effect

Press 2CH to select “2CH ST.” or press A.F.D. repeatedly to select “A.F.D. AUTO”.

### Tips

- The receiver lets you apply the last selected sound field to an input whenever it is selected (Sound Field Link). For example, if you select HALL for the SA-CD/CD input, then change to a different input and then return to SA-CD/CD, HALL will automatically be applied again.
- You can identify the encoding format of DVD software, etc. by looking at the logo on the package.
  - : Dolby Digital discs
  - : Dolby Surround encoded programs
  - : DTS Digital Surround encoded programs

### Notes

- Sound fields do not function for the signals with a sampling frequency of more than 48 kHz.
- When one of the following sound fields are selected, no sound is output from the sub woofer if all the speakers are set to “LARGE” in the SET UP menu. However, the sound will be output from the sub woofer if the digital input signal contains LFE (Low Frequency Effect) signals, or if the front, center, or surround speakers are set to “SMALL”.
  - HALL
  - JAZZ CLUB
  - LIVE CONCERT

## Selecting the surround back decoding mode

### — *SURR BACK DECODING*

This function lets you select the decoding mode for the surround back signals of the multi channel input stream.

By decoding the surround back signal of DVD software (etc.) recorded in Dolby Digital EX, DTS-ES Matrix, DTS-ES Discrete 6.1, etc. format, you can enjoy the surround sound intended by the filmmakers.

**Press SURR BACK DECODING repeatedly to select the surround back decoding mode.**

“SB XXXX” appears in the display.

For details, see “How to select the surround back decoding mode” on page 35.

#### **Tip**

You can select the surround back decoding mode using “SB XXXX” in the CUSTOMIZE menu (page 39).

#### **Note**

You can select the surround back decoding mode only when A.F.D. mode is selected except for Dolby Pro Logic IIx mode (page 30).

## How to select the surround back decoding mode

You can select the surround back mode you want according to the input stream.

### When you select “SB AUTO”

When the input stream contains the 6.1 channel decode flag<sup>a)</sup>, the appropriate decoder is applied to decode the surround back signal.

Input stream	Output channel	Applied surround back decoder
Dolby Digital 5.1	5.1	—
Dolby Digital EX <sup>b)</sup>	6.1	Matrix decoder conforms to Dolby Digital EX
DTS 5.1	5.1	—
DTS-ES Matrix 6.1 <sup>c)</sup>	6.1	DTS Matrix decoder
DTS-ES Discrete 6.1 <sup>d)</sup>	6.1	DTS Discrete decoder

### When you select “SB ON”

Dolby Digital EX is applied to decode the surround back signal regardless of the 6.1 channel decode flag<sup>a)</sup> in the input stream. This decoder conforms to Dolby Digital EX and functions the same as the decoders<sup>e)</sup> used in movie theaters.

Input stream	Output channel	Applied surround back decoder
Dolby Digital 5.1	6.1	Matrix decoder conforms to Dolby Digital EX
Dolby Digital EX <sup>b)</sup>	6.1	Matrix decoder conforms to Dolby Digital EX
DTS 5.1	6.1	Matrix decoder conforms to Dolby Digital EX
DTS-ES Matrix 6.1 <sup>c)</sup>	6.1	Matrix decoder conforms to Dolby Digital EX
DTS-ES Discrete 6.1 <sup>d)</sup>	6.1	Matrix decoder conforms to Dolby Digital EX

### When you select “SB OFF”

Surround back decoding is not performed.

<sup>a)</sup> 6.1 channel decode flag is the information recorded in software like DVDs.

<sup>b)</sup> Dolby Digital DVD that includes a Surround EX flag. The Dolby Corporation web page can help you distinguish Surround EX films.

<sup>c)</sup> Software encoded with a flag to denote it has both Surround EX and 5.1 channel signals.

<sup>d)</sup> Software encoded with both 5.1 channel signals and an extension stream designed for returning those signals to 6.1 discrete channels. Discrete 6.1 channel signals are DVD specific signals not used in movie theaters.

<sup>e)</sup> This decoder can be used for all 6.1 formats (Dolby Digital EX, DTS-ES Matrix 6.1, DTS-ES Discrete 6.1).

### Note

There may be no sound from the surround back speaker in Dolby Digital EX mode. Some discs have no Dolby Digital EX flag even though the packages have Dolby Digital EX logos. In this case, select “SB ON”.

## Advanced Adjustments and Settings

### Assigning the component video input

#### — COMPONENT VIDEO INPUT ASSIGN

(Except for models of area code **CEL, CEK**)

You can assign a component video input for another visual input.

- 1** Press **MAIN MENU** repeatedly to select “<CUSTOM>”.
- 2** Press **<** or **>** repeatedly to select “COMP. V. A.”.
- 3** Press **ENTER**.
- 4** Press **<** or **>** repeatedly to select the component video input you want to assign.
- 5** Press **+** or **-** repeatedly to select the input you want to assign the component video input jacks selected in step 4.

The input you can assign varies for each component video input. For details, see “Selectable component video inputs for each input”.

- 6** Press **ENTER**.

#### Selectable component video inputs for each input

The initial settings are underlined.

---

##### VIDEO 2

VIDEO 1, VIDEO 2, VIDEO 3

---

##### DVD

VIDEO 1, VIDEO 3, DVD

---

#### Note

You cannot assign a visual input to more than one component video input.

## Switching the audio input mode for digital components

#### — INPUT MODE

You can switch the audio input mode for components which have digital audio input jacks.

- 1** Press input buttons to select the input.
- 2** Press **INPUT MODE** repeatedly to select the audio input mode.

The selected audio input mode appears in the display.

#### Audio input modes

- **AUTO IN**  
Gives priority to digital signals when there are both digital and analog connections. If there are no digital signals, analog is selected.
- **COAX IN**  
Specifies the digital audio signals input to the DIGITAL COAXIAL input jack.
- **OPT IN**  
Specifies the digital audio signals input to the DIGITAL OPTICAL input jacks.
- **ANALOG**  
Specifies the analog audio signals input to the AUDIO IN (L/R) jacks.

#### Notes

- When signals with a sampling frequency of more than 48 kHz is input, the tone and sound field cannot be used.
- Some audio input modes may be dimmed depending on the input. This means that the selected input is unavailable.

## Customizing sound fields

By adjusting the LEVEL menu, you can customize the sound fields to suit your particular listening situation.

### Note on the displayed items

The setup items you can adjust in each menu vary depending on the sound field. Certain setup parameters may be dimmed in the display. This means that the selected parameter is either unavailable or fixed and unchangeable.

## Adjusting the LEVEL menu

You can adjust the balance and level of each speaker. These settings are applied to all sound fields except for effect level parameter. The effect level parameter settings are stored individually for each sound field.

- 1 Start playing a source encoded with multi channel surround effects (DVD, etc.).**
- 2 Press MAIN MENU repeatedly to select “<LEVEL>”.**
- 3 Press < or > repeatedly to select the parameter you want to adjust.**  
For details, see “LEVEL menu parameters” below.
- 4 While monitoring the sound, press + or – repeatedly to select the setting you want.**  
The setting is entered automatically.
- 5 Repeat steps 3 and 4 to adjust the other parameters.**

### LEVEL menu parameters

The initial setting is underlined>.

#### ■ BAL. L/R XX (Front speaker balance)

Initial setting: BALANCE (0)

Lets you adjust the balance between front left and right speakers. You can adjust in the range of BAL. L (+1 to +8), BALANCE (0), BAL. R (+1 to +8) in 17 steps.

#### ■ CTR XXX dB (Center speaker level)

#### ■ SUR.L. XXX dB (Surround speaker (left) level)

#### ■ SUR.R. XXX dB (Surround speaker (right) level)

#### ■ SB XXX dB (Surround back speaker level)

#### ■ S.W. XXX dB (Sub woofer level)

Initial setting: 0 dB

You can adjust from –10 dB to +10 dB in 1 dB steps.

#### ■ COMP. XXX (Dynamic range compressor)

Lets you compress the dynamic range of the sound track. This may be useful when you want to watch movies at low volumes late at night.

##### • OFF

The dynamic range is not compressed.

##### • STD

The dynamic range is compressed as intended by the recording engineer.

##### • MAX

The dynamic range is compressed dramatically.

### Tip

Dynamic range compressor lets you compress the dynamic range of the soundtrack based on the dynamic range information included in the Dolby Digital signal. We recommend using the “MAX” setting. This greatly compresses the dynamic range and lets you view movies late at night at low volumes. Unlike analog limiters, the levels are predetermined and provide a very natural compression.

### Note

Dynamic range compression is possible with Dolby Digital sources only.

#### ■ EFCT. XXX (Effect level)

Initial setting: STD

Lets you adjust the “presence” of the surround effect in 3 levels – MIN (minimum effect), STD (standard effect) and MAX (maximum effect).

### Note

This parameter is valid only when you use a sound field selected with the MOVIE or MUSIC buttons.

## Resetting sound fields to the initial settings

Use the buttons on the receiver for the operation.

- 1** Press I/⏻ to turn off the power.
- 2** While holding down 2CH, press I/⏻.  
“SF. CLR.” appears in the display and all sound fields are reset to the initial setting.

## Adjusting the tone

You can adjust the tonal quality (bass, treble level) of the front speakers using the TONE menu.

- 1** Start playing a source encoded with multi channel surround effects (DVD, etc.).
- 2** Press MAIN MENU repeatedly to select “<TONE>”.
- 3** Press < or > repeatedly to select the parameter you want to adjust.  
For details, see “TONE menu parameters” below.
- 4** While monitoring the sound, press + or – repeatedly to select the setting you want.  
The setting is entered automatically.
- 5** Repeat steps 3 and 4 to adjust the other items.

### Note

You cannot adjust the tone when the receiver is decoding signals with a sampling frequency of more than 48 kHz, or when DTS 96/24, DTS-ES Matrix or DTS Neo:6 decoding is applied.

## TONE menu parameters

- BASS XX dB  
(Front speaker bass level)
- TREB. XX dB  
(Front speaker treble level)

Initial setting: 0 dB

You can adjust from –6 dB to +6 dB in 1 dB steps.

## Advanced settings

### Using the CUSTOMIZE menu to adjust the receiver

You can adjust various receiver settings using the CUSTOMIZE menu.

- 1** Press **MAIN MENU** repeatedly to select “<CUSTOM>”.
- 2** Press **<** or **>** repeatedly to select the parameter you want to adjust.  
For details, see “CUSTOMIZE menu parameters” below.
- 3** Press **+** or **–** repeatedly to select the setting you want.  
The setting is entered automatically.
- 4** Repeat steps 2 and 3 to adjust the other items.

### CUSTOMIZE menu parameters

The initial settings are underlined.

#### ■ **96 XXXX** (DTS 96/24 decoding mode)

##### • AUTO

When a DTS 96/24 signal is input, it is played back at 96 kHz sampling frequencies.

##### • OFF

Even when a DTS 96/24 signal is input, it is played back at 48 kHz sampling frequencies.

#### Notes

- This parameter is valid only in the A.F.D. mode (page 30). In other sound fields, this parameter is always set to “96 OFF”.
- DTS 96/24 decoding is valid only in the A.F.D. mode (page 30). When the system is set to other sound fields, standard 48 kHz decoding is used.
- Even when a DTS 96/24 signal is input, standard 48 kHz decoding is used if any speakers are set to “SMALL” or if the sub woofer is set to “NO”.

#### ■ **SB XXXX**

##### (Surround back decoding mode)

You can also press **SURR BACK DECODING** to set the surround back decoding mode (page 34).

For details on each decoding mode, see page 35.

- OFF
- AUTO
- ON

#### Note

This parameter is valid only in the A.F.D. mode except for Dolby Pro Logic IIx mode (page 30).

#### ■ **A.V.SYNC. X** (Time alignment)

- Y (Yes) (Delay time: 68 ms)

The audio output is delayed so that the time gap between the audio output and visual display is minimized.

- N (No) (Delay time: 0 ms)

The audio output is not delayed.

#### Notes

- This parameter is useful when you use a large LCD or plasma monitor or a projection TV.
- This parameter is valid only when you use a sound field selected with the 2CH or A.F.D. buttons.
- This parameter is not valid when
  - PCM 96 kHz, DTS 96/24 or DTS 2048 signals are input.
  - the receiver performing DTS-ES Matrix 6.1 decoding.
  - MULTI CH IN function is selected.

#### ■ **DEC. XXXX** (Digital audio input decoding priority)

Lets you specify the input mode for the digital signal input to the DIGITAL IN jacks.

The initial setting is “DEC. AUTO” for VIDEO 2 and “DEC. PCM” for DVD and SA-CD/CD.

##### • AUTO

Automatically switches the input mode between DTS, Dolby Digital, or PCM.

##### • PCM

PCM signals are given priority (to prevent the interruption when playback starts). Even when other signals are input, the sound is output. However, this receiver cannot decode DTS-CD when set to “DEC. PCM”.

#### Note

When set to “DEC. AUTO” and the sound from the digital audio jacks (for CD, etc.) is interrupted when playback starts, set to “DEC. PCM”.

*continued*

## ■ DUAL XXX

### (Digital broadcast language selection)

Lets you select the language you want to listen to during digital broadcast. This feature only functions for Dolby Digital sources.

- **M/S (Main/Sub)**  
Sound of the main language will be output through the front left speaker and sound of the sub language will be output through the front right speaker simultaneously.
- **M (Main)**  
Sound of the main language will be output.
- **S (Sub)**  
Sound of the sub language will be output.
- **M+S (Main + Sub)**  
Mixed sound of both the main and sub languages will be output.

## ■ COMP. V. A.

### (Component video input assignment) (Except for models of area code CEL, CEK)

Lets you assign the component video input to another visual input. For details, see "Assigning the component video input" on page 36.

## ■ NAME IN

### (Naming preset stations and inputs)

Lets you set the name of preset stations and inputs selected with input buttons. For details, see "Naming preset stations and inputs" on page 41.



## Other Operations

### Naming preset stations and inputs

You can enter a name of up to 8 characters for preset stations and inputs selected with input buttons, and display it in the receiver's display. Use the buttons on the receiver for the operation.

#### 1 To index a preset station

**Press FM or AM to select the FM or AM band, then tune in the preset station you want to create an index name for (page 25).**

#### To index an input

**Press the input button to select the input you want to create an index name for.**

#### 2 Press MAIN MENU repeatedly to select "<CUSTOM>".

#### 3 Press < or > repeatedly to select "NAME IN".

#### 4 Press ENTER.

The cursor flashes and you can select a character.

#### 5 Use < or > and + or – to create an index name.

Press + or – repeatedly to select a character, then press > to move the cursor to the next position.

#### Tips

- You can select the character type as follows by pressing + or – repeatedly.  
Alphabet (upper case) → Numbers → Symbols
- To enter a blank space, press + or – repeatedly until a blank space appears in the display.
- If you made a mistake, press < or > repeatedly until the character you want to change flashes, then press + or – repeatedly to select the correct character.

#### 6 Press ENTER to store the index name.

##### Note (Models of area code CEL, CEK only)

When you name an RDS station and tune in the station, the Program Service name appears instead of the name you entered. (You cannot change the name of a Program Service name. The name you entered will be overwritten by the Program Service name.)

## Using the Sleep Timer

You can set the receiver to turn off automatically at a specified time. Use the remote for the operation.

**Press SLEEP repeatedly while the power is on.**

Each time you press SLEEP, the display changes cyclically as follows:

2-00-00 → 1-30-00 → 1-00-00 → 0-30-00 → OFF

While using Sleep Timer, "SLEEP" lights up in the display.

### Tip

To check the remaining time before the receiver turns off, press SLEEP. The remaining time appears in the display. If you press SLEEP again, the sleep timer will be canceled.

## Selecting the speaker system

You can select the front speaker system you want to use.

**Press SPEAKERS (OFF/A/B/A+B) repeatedly to select the front speaker system you want to use.**

The selected speaker system appears in the display. To turn off the speaker output, press SPEAKERS (OFF/A/B/A+B) repeatedly until "SP A" and "SP B" indication turn off.

### The speaker system

- SP A  
The speakers connected to the SPEAKERS FRONT A terminals.
- SP B  
The speakers connected to the SPEAKERS FRONT B terminals.
- SP A and SP B  
The speakers connected to both the SPEAKERS FRONT A and B terminals (parallel connection).

## Recording

Before you begin, make sure you have connected all components properly.

### Recording on an audio tape or MiniDisc

You can record on a cassette tape or MiniDisc using the receiver. See the operating instructions of your cassette deck or MD deck if you need help.

- 1 Select the component to be recorded.**
- 2 Prepare the component for playing.**  
For example, insert a CD into the CD player.
- 3 Insert a blank tape or MD into the recording deck and adjust the recording level, if necessary.**
- 4 Start recording on the recording deck, then start playback on the playback component.**

#### Notes

- Sound adjustments do not affect the signal output from the MD/TAPE OUT jacks.
- The analog audio signals of the current input is output from the MD/TAPE OUT jacks.
- The signals input to the MULTI CH IN jacks are not output from the MD/TAPE OUT jacks even when MULTI CH IN is being used. The analog audio signals of the current or previously used input are output.

## Recording on a video tape

You can record from a VCR, a TV or a DVD player using the receiver. You can also add audio from a variety of audio sources when editing a video tape. See the operating instructions of your VCR or DVD player if you need help.

- 1 Select the program source to be recorded.**
- 2 Prepare the component for playing.**  
For example, insert a video tape you want to record into VCR.
- 3 Insert a blank video tape into the VCR (VIDEO 1) for recording.**
- 4 Start recording on the recording VCR, then start playing the video tape or DVD you want to record.**

#### Tip

You can record the sound from any audio source onto a video tape while copying from a video tape or DVD. Locate the point where you want to start recording from another audio source, select the program source, then start playback. The audio from that source will be recorded onto the audio track of the video tape instead of the audio from the original medium. To resume audio recording from the original medium, select the video source again.

#### Notes


- You cannot record a digital audio signal using a component connected to the analog VIDEO 1 AUDIO OUT jacks.
- Make sure to make both digital and analog connections to the VIDEO 2 and DVD inputs. Analog recording is not possible if you make only digital connections.
- The analog audio signals of the current input are output from the VIDEO 1 AUDIO OUT jacks.
- The signals input to the MULTI CH IN jacks are not output from VIDEO 1 AUDIO OUT jacks even when MULTI CH IN is being used. The analog audio signals of the current or previously used input are output.


## Operations Using the Remote RM-AAU001

You can use the remote RM-AAU001 to operate the components in your system.

### Before you use your remote

#### Inserting batteries into the remote

Insert R6 (size-AA) batteries with the + and – properly oriented in the battery compartment. When using the remote, point it at the remote sensor  on the receiver.

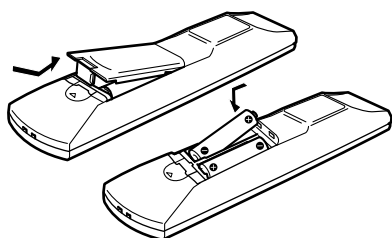


#### Tip


Under normal conditions, the batteries should last for about 6 months. When the remote no longer operates the receiver, replace all batteries with new ones.

#### Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

### Remote button description

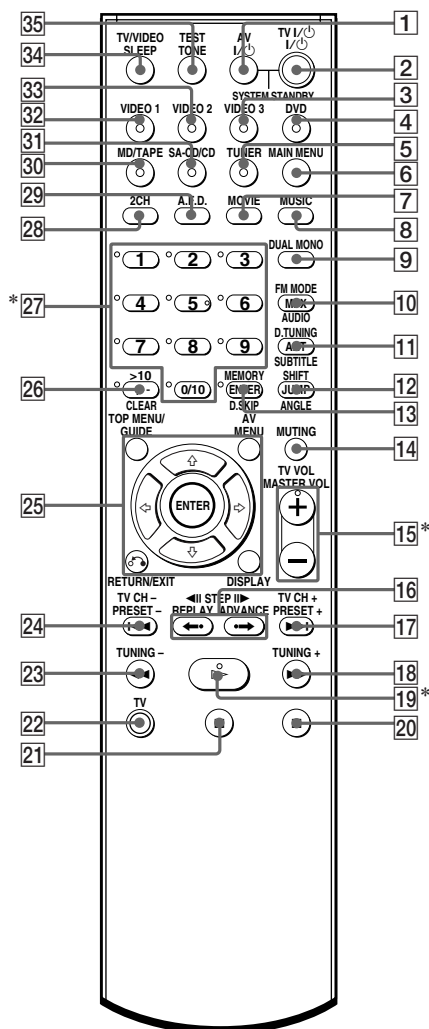
 

 
 
 
 




 
 
 
 
 
 

 



 

 



 



 



\* The MASTER VOL +, numeric button 5 and  buttons have a tactile dot. Use the tactile dot as a reference when operating the receiver and other audio/video components.

The tables below show the settings of each button.


Remote Button	Operations	Function
A.F.D. [29]	Receiver	Selects the decoding mode for audio sound.
ANGLE [12]	DVD player	Selects viewing angle or changes the angles.
ANT [11]	VCR/ Satellite tuner	Selects output signal from the antenna terminal: TV signal or VCR program.
AUDIO [10]	Satellite tuner/ DVD player	Changes the sound to Multiplex, Bilingual or Multi channel TV Sound.
AV MENU [25]	VCR/ Satellite tuner/ DVD player	Displays menu.
AV I/II [1]	VCR/ Satellite tuner/ CD player/ DVD player/ MD deck	Turns the audio and video components on or off.
CLEAR [26]	Satellite tuner/ DVD player	Clears a mistake when you press the incorrect numeric buttons or returns to continuous playback etc.
DISPLAY [25]	Receiver/ VCR/ Satellite tuner/ CD player/ DVD player/ MD deck	Selects information displayed on the TV screen.
D.SKIP [13]	CD player/ DVD player	Skips discs (multi-disc changer only).
D.TUNING [11]	Receiver	Enters direct tuning mode.
DUAL MONO [9]	Receiver	Selects the language you want during digital broadcast.
DVD [4]	Receiver	To watch DVD.
ENTER [13]	TV/VCR/ Satellite tuner	After selecting a channel, disc or track using the numeric buttons, press to enter the value.

Remote Button	Operations	Function
ENTER [25]	Receiver/ VCR/ Satellite tuner/ CD player/ DVD player/ MD deck	Enters the selection.
FM MODE [10]	Receiver	Selects FM monaural or stereo reception.
JUMP [12]	Satellite tuner	Toggles between the previous and current channels.
MAIN MENU [6]	Receiver	Selects the menu of the receiver.
MASTER VOL +/- [15]	Receiver/ TV	Adjusts the master volume of the receiver.
MD/TAPE [30]	Receiver	To listen to Minidisc or audio tape.
MEMORY [13]	Receiver	Stores the radio stations.
MOVIE [7]	Receiver	Selects the pre-programmed sound fields for movie.
MPX [10]	VCR	Selects Main/Sub language.
MUSIC [8]	Receiver	Selects the pre-programmed sound fields for music.
MUTING [14]	Receiver	Mutes the sound from the receiver.
PRESET -/+ [24] [17]	Receiver	Selects preset stations.
	TV/VCR/ Satellite tuner	Selects preset channel.
RETURN/ EXIT [25]	DVD player	Returns to the previous menu.
	Satellite tuner	Exits the menu.
SA-CD/CD [31]	Receiver	To listen to Super Audio CD or compact disc.
SHIFT [12]	Receiver	Selects a memory page for presetting radio stations or tuning to preset stations.
SLEEP [34]	Receiver	Activates the sleep function and the duration which the receiver turns off automatically.

Remote Button	Operations	Function
SUBTITLE  11	DVD player	Changes the subtitles.
SYSTEM STANDBY (Press AV  1 and  2 at the same time)	Receiver/TV/ VCR/ Satellite tuner/ CD player/ DVD player/ MD deck	Turns off the receiver and other Sony audio/video components.
TEST TONE  35	Receiver	Outputs test tone.
TOP MENU/ GUIDE  25	DVD player Satellite tuner	Displays DVD title. Displays guide menu.
TUNER  5	Receiver	To listen to radio programs.
TUNING +/-  23  18	Receiver	Scans radio stations.
TV  22	TV	To watch TV programs.
TV CH +/-  24  17	TV	Selects preset TV channels.
TV/VIDEO  34	TV	Selects input signal: TV input or video input.
TV VOL +/-  15	TV	Adjusts the volume of the TV.
TV  2	TV	Turns the TV on or off.
VIDEO 1  32	Receiver	To watch VCR. (VTR mode 3)
VIDEO 2  33	Receiver	To watch VCR. (VTR mode 1)
VIDEO 3  3	Receiver	To watch VCR. (VTR mode 2)
1-9 and 0/10  27	Receiver	Use with SHIFT to preset radio station or tuning to preset stations and with D.TUNING for direct tuning.
	CD player/ DVD player/ MD deck	Selects track numbers. 0/10 selects track 10.
	TV/VCR/ Satellite tuner	Selects channel numbers.
2CH  28	Receiver	Selects 2CH STEREO mode.

Remote Button	Operations	Function
>10  26	VCR/ Satellite tuner/ CD player/ MD deck	Selects track numbers over 10.
-/--  26	TV	Selects the channel entry mode, either one or two digit.
 2	Receiver	Turns the receiver on or off.
◀   STEP   ▶ REPLAY ◀-/-/ ADVANCE ->->  16	VCR/ DVD player	Replay the previous scene or fast forward the current scene.
◀◀/▶▶  24  17	CD player/ DVD player/ MD deck/ Tape deck	Skips tracks.
◀◀/▶▶  23  18	DVD player	Searches tracks in the forward or backward direction.
	VCR/ CD player/ MD deck/ Tape deck	Fastforwards or rewinds.
▷  19	VCR/ CD player/ DVD player/ MD deck/ Tape deck	Starts playback.
 21	VCR/ CD player/ DVD player/ MD deck/ Tape deck	Pauses playback or recording. (Also starts recording with components in recording standby.)
■  20	VCR/ CD player/ DVD player/ MD deck/ Tape deck	Stops playback.
↶  25	DVD player	Returns to the previous menu or exits the menu.
▲/▼  25	Receiver	Selects a menu item.
◀/▶  25	Receiver	Adjusts or changes the setting.
▲/▼/◀/▶  25	VCR/ Satellite tuner/ DVD player	Selects a menu item.

### Tips

 - You need to assign a function to the VIDEO 3 button before you can use the button to control your audio/video equipment. For details, refer “Changing the factory setting of an input button” on page 47.
- To activate the buttons with orange printing, press TV and the button you want simultaneously.
- Before you use the  button for receiver operation, press MAIN MENU. To operate other components, press TOP MENU/GUIDE or AV MENU after pressing the input button.

### Notes

- When you press the input buttons (VIDEO 1, VIDEO 2, VIDEO 3, DVD), the input mode of the TV might not switch to the corresponding input mode that you want. In this case, press the TV/VIDEO button to switch the input mode of the TV.
- Some functions explained in this section may not work depending on the model.
- The above explanation is intended to serve as an example only. Therefore, depending on the component the above operation may not be possible or may operate differently than described.

## Changing the factory setting of an input button

If the factory settings of the input buttons do not match your system components, you can change them. For example, if you have a tape deck and you do not have an MD deck, you can assign the MD/TAPE button to your tape deck.

**1 Hold down the input button whose input you want to change (for example, MD/TAPE).**

**2 Press the corresponding button of the component you want to assign to the input button (for example, 7 – Tape deck).**

The following buttons are assigned to select the input:

To operate	Press
VCR (command mode VTR 3*)	1
VCR (command mode VTR 2*)	2
DVD player/DVD recorder (command mode DVD1)	3
DVD recorder (command mode DVD3)	4
CD player	5
MD deck	6
Tape deck B	7
Tuner (this receiver)	8
DSS (Digital Satellite Receiver)	9
DCS (Digital CS Tuner)	0/10
BSD (Digital BS Tuner)	-/--


\*Sony VCRs are operated with a VTR 2 or 3 setting. These correspond to 8mm and VHS respectively.

Now you can use the MD/TAPE button to control the tape deck.

### To reset a button to its factory setting

Repeat the above procedure.

### To reset all the input buttons to their factory setting

Press , TEST TONE and MASTER VOL – at the same time.

## Additional Information

### Precautions

#### On safety

Should any solid object or liquid fall into the cabinet, unplug the receiver and have it checked by qualified personnel before operating it any further.

#### On power sources

- Before operating the receiver, check that the operating voltage is identical with your local power supply. The operating voltage is indicated on the nameplate at the rear of the receiver.
- The receiver is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the receiver itself has been turned off.
- If you are not going to use the receiver for a long time, be sure to disconnect the receiver from the wall outlet. To disconnect the AC power cord, grasp the plug itself; never pull the cord.
- (Models of area code U, CA only)  
One blade of the plug is wider than the other for the purpose of safety and will fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- AC power cord must be changed only at the qualified service shop.

#### On heat buildup

Although the receiver heats up during operation, this is not a malfunction. If you continuously use this receiver at a large volume, the cabinet temperature of the top, side and bottom rises considerably. To avoid burning yourself, do not touch the cabinet.

#### On placement

- Place the receiver in a location with adequate ventilation to prevent heat buildup and prolong the life of the receiver.
- Do not place the receiver near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place anything on top of the cabinet that might block the ventilation holes and cause malfunctions.
- Use caution when placing the receiver on surfaces that have been specially treated (with wax, oil, polish, etc.) as staining or discoloration of the surface may result.

#### On operation

Before connecting other components, be sure to turn off and unplug the receiver.

#### On cleaning

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

If you have any question or problem concerning your receiver, please consult your nearest Sony dealer.



# Troubleshooting

If you experience any of the following difficulties while using the receiver, use this troubleshooting guide to help you remedy the problem.

---

## **There is no sound or only a very low-level sound no matter which component is selected.**

- Check that the speakers and components are connected securely and correctly.
- Check that both the receiver and all components are turned on.
- Check that you have selected the correct component on the receiver.
- Check that MASTER VOLUME  $-/+$  is not set at "VOL MIN".
- Check that the SPEAKERS (OFF/A/B/A+B) is not set to off (page 42).
- Check that the headphones are not connected.
- Press MUTING on the remote to cancel the muting function.

---

## **There is no sound from a specific component.**

- Check that the component is connected correctly to the audio input jacks for that component.
- Check that the cord(s) used for the connection is (are) fully inserted into the jacks on both the receiver and the component.
- Check that you have selected the correct component on the receiver.

---

## **There is no sound from one of the front speakers.**

- Connect a pair of headphones to the PHONES jack to verify that sound is output from the headphones. If only one channel is output from the headphones, the component may not be connected to the receiver correctly. Check that all the cords are fully inserted into the jacks on both the receiver and the component. If both channels are output from the headphones, the front speaker may not be connected to the receiver correctly. Check the connection of the front speaker which is not outputting any sound.

---

## **There is no sound from analog 2 channel sources.**

- Check that the INPUT MODE is not set to "COAX IN" or "OPT IN" (page 36).
- Check that you have not selected MULTI CH IN function.

---

## **There is no sound from digital sources (from COAXIAL or OPTICAL input jack).**

- Check that the INPUT MODE is not set to "ANALOG" (page 36). Check that the INPUT MODE is not set to "COAX IN" for the sources from OPTICAL input jack, or set to "OPT IN" for the sources from COAXIAL input jack.
- Check that you have not selected MULTI CH IN function.

---

## **The left and right sounds are unbalanced or reversed.**

- Check that the speakers and components are connected correctly and securely.
- Adjust balance parameters in the LEVEL menu.

---

## **There is severe hum or noise.**

- Check that the speakers and components are connected securely.
- Check that the connecting cords are away from a transformer or motor, and at least 3 meters (10 feet) away from a TV set or fluorescent light.
- Move your audio components away from the TV.
- The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.

---

## **There is no sound from the surround back speakers.**

- Some discs have no Dolby Digital EX flag even though the packages have Dolby Digital EX logos. In this case, select "SB ON" (page 39).

---

## **There is no sound or only a very low-level sound is heard from the center/surround/surround back speakers.**

- Select the CINEMA STUDIO EX mode (page 32).
- Adjust the speaker level (page 21).
- Make sure the center/surround speakers size parameter are set to either "SMALL" or "LARGE" (pages 18 and 19).
- Make sure the surround back speaker selection parameter is set to "YES" (page 19).

---

## **There is no sound from the sub woofer.**

- Make sure you have turn on your sub woofer.
- Check that the sub woofer is connected correctly and securely.
- Make sure the sub woofer selection parameter is set to "YES" (page 18).
- There is no sound output from the sub woofer depending on the sound field.

---

**The surround effect cannot be obtained.**

- Make sure the sound field function is on (press MOVIE or MUSIC).
- Sound fields do not function for the signals with a sampling frequency of more than 48 kHz.

---

**Dolby Digital or DTS multi channel sound is not reproduced.**

- Check that the playing DVD, etc. is recorded in Dolby Digital or DTS format.
- When connecting the DVD player, etc. to the digital input jacks of this receiver, check the audio setting (settings for the audio output) of the connected component.

---

**Recording cannot be done.**


- Check that the components are connected correctly.
- Select the source component with input buttons.

---

**The FM reception is poor.**

- Use a 75-ohm coaxial cable (not supplied) to connect the receiver to an outdoor FM antenna as shown below. If you connect the receiver to an outdoor antenna, ground it against lightning. To prevent a gas explosion, do not connect the ground wire to a gas pipe.

Outdoor FM antenna

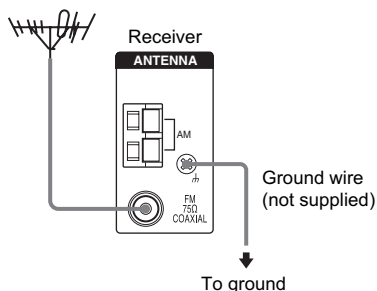

---

**Radio stations cannot be tuned in.**

- Check that the antennas are connected securely. Adjust the antennas and connect an external antenna if necessary.
- The signal strength of the stations is too weak (when tuning in with automatic tuning). Use direct tuning.
- Make sure you set the tuning interval correctly (when tuning in AM stations with direct tuning).
- No stations have been preset or the preset stations have been cleared (when tuning by scanning preset stations). Preset the stations (page 25).
- Press DISPLAY repeatedly so that the frequency appears in the display.

---

**RDS does not work.\***

- Make sure that you are tuned to an FM RDS station.
- Select a stronger FM station.

---

**The RDS information that you want does not appear.\***

- Contact the radio station and find out whether they actually provide the service in question. If so, the service may be temporarily out of order.

---

**There is no picture or an unclear picture appears on the TV screen or monitor.**

- Select the appropriate input on the receiver.
- Set your TV to the appropriate input mode.
- Move your audio components away from the TV.
- Connect your TV to the receiver using the same type of connecting cord as the one used to connect the receiver and video component (pages 8 and 11).

---


 
\* Models of area code CEL, CEK only.

---

**Remote control**

---

**The remote does not function.**

- Point the remote at the remote sensor  on the receiver.
  - Remove any obstacles in the path between the remote and the receiver.
  - Replace all the batteries in the remote with new ones, if they are weak.
  - Make sure you select the correct input on the remote.
  - You need to assign a function to the VIDEO 3 button before you can use the button to control your audio/video equipment. For details, refer "Changing the factory setting of an input button" on page 47.
  - To activate the buttons with orange printing, press TV and the button you want simultaneously.
  - Before you use the  button for receiver operation, press MAIN MENU. To operate other components, press TOP MENU/GUIDE or AV MENU after pressing the input button.
-

Error messages

If there is a malfunction, the display shows a message. You can check the condition of the receiver by the message. Refer to the following table to solve the problem.

DEC. ERROR

Appears when the signal which the receiver cannot decode (ex. DTS-CD) is input when “DEC. XXXX” in the CUSTOMIZE menu is set to “DEC. PCM”. Set to “DEC. AUTO”.

PROTECT

Irregular current is output from the speakers. The receiver will automatically turn off after a few seconds. Check the speaker connection and turn on the power again. If this problem persists, consult your nearest Sony dealer.

If you are unable to remedy the problem using the troubleshooting guide

Clearing the receiver’s memory may remedy the problem (page 17). However, note that all memorized settings will be reset to their factory settings and you will have to readjust all settings on the receiver.

If the problem persist

Consult your nearest Sony dealer.

Reference sections for clearing the receiver’s memory

To clear	See
All memorized settings	page 17
Customized sound fields	page 38

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:  
(Models of area code U only)

With 8 ohm loads, both channels driven, from 20 – 20,000 Hz; rated 90 watts per channel minimum RMS power, with no more than 0.09% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

Power Output	
Models of area code U, CA	
Rated Power Output at Stereo Mode	
(8 ohms 20 Hz – 20 kHz, THD 0.09%)	90 W + 90 W <sup>1)</sup>
(8 ohms 1 kHz, THD 0.7%)	100 W + 100 W <sup>1)</sup>
(8 ohms 1 kHz, THD 10%)	125 W + 125 W <sup>1)</sup>
Reference Power Output <sup>1)</sup>	
(8 ohms 20 Hz – 20 kHz, THD 0.09%)	
FRONT <sup>2)</sup> :	90 W/ch
CENTER <sup>2)</sup> :	90 W
SURR <sup>2)</sup> :	90 W/ch
SURR BACK <sup>2)</sup> :	90 W
(8 ohms 1 kHz, THD 0.7%)	
FRONT <sup>2)</sup> :	100 W/ch
CENTER <sup>2)</sup> :	100 W
SURR <sup>2)</sup> :	100 W/ch
SURR BACK <sup>2)</sup> :	100 W
(8 ohms 1 kHz, THD 10%)	
FRONT <sup>2)</sup> :	125 W/ch
CENTER <sup>2)</sup> :	125 W
SURR <sup>2)</sup> :	125 W/ch
SURR BACK <sup>2)</sup> :	125 W

Models of area code CEL, CEK	
Rated Power Output at Stereo Mode	
(8 ohms 20 Hz – 20 kHz, THD 0.09%)	90 W + 90 W <sup>1)</sup>
(8 ohms 1 kHz, THD 0.7%)	100 W + 100 W <sup>1)</sup>
(8 ohms 1 kHz, THD 10%)	125 W + 125 W <sup>1)</sup>

Reference Power Output<sup>1)</sup>  
 (8 ohms 20 Hz – 20 kHz, THD 0.09%)  
 FRONT<sup>2)</sup>: 110 W/ch  
 CENTER<sup>2)</sup>: 110 W  
 SURR<sup>2)</sup>: 110 W/ch  
 SURR BACK<sup>2)</sup>: 110 W  
 (8 ohms 1 kHz, THD 0.7%)  
 FRONT<sup>2)</sup>: 120 W/ch  
 CENTER<sup>2)</sup>: 120 W  
 SURR<sup>2)</sup>: 120 W/ch  
 SURR BACK<sup>2)</sup>: 120 W  
 (8 ohms 1 kHz, THD 10%)  
 FRONT<sup>2)</sup>: 150 W/ch  
 CENTER<sup>2)</sup>: 150 W  
 SURR<sup>2)</sup>: 150 W/ch  
 SURR BACK<sup>2)</sup>: 150 W

Models of area code E2/E3, TW, AU  
 Rated Power Output at Stereo Mode  
 (8 ohms 20 Hz – 20 kHz, THD 0.09%)  
 80 W + 80 W<sup>1)</sup>  
 (8 ohms 1 kHz, THD 0.7%)  
 100 W + 100 W<sup>1)</sup>  
 (8 ohms 1 kHz, THD 10%)  
 120 W + 120 W<sup>1)</sup>

Reference Power Output<sup>1)</sup>  
 (8 ohms 20 Hz – 20 kHz, THD 0.09%)  
 FRONT<sup>2)</sup>: 110 W/ch  
 CENTER<sup>2)</sup>: 110 W  
 SURR<sup>2)</sup>: 110 W/ch  
 SURR BACK<sup>2)</sup>: 110 W  
 (8 ohms 1 kHz, THD 0.7%)  
 FRONT<sup>2)</sup>: 120 W/ch  
 CENTER<sup>2)</sup>: 120 W  
 SURR<sup>2)</sup>: 120 W/ch  
 SURR BACK<sup>2)</sup>: 120 W  
 (8 ohms 1 kHz, THD 10%)  
 FRONT<sup>2)</sup>: 150 W/ch  
 CENTER<sup>2)</sup>: 150 W  
 SURR<sup>2)</sup>: 150 W/ch  
 SURR BACK<sup>2)</sup>: 150 W

Models of area code AR, KR  
 Rated Power Output at Stereo Mode  
 (8 ohms 20 Hz – 20 kHz, THD 0.09%)  
 80 W + 80 W<sup>1)</sup>  
 70 W + 70 W<sup>3)</sup>  
 (8 ohms 1 kHz, THD 0.7%)  
 100 W + 100 W<sup>1)</sup>  
 90 W + 90 W<sup>3)</sup>  
 (8 ohms 1 kHz, THD 10%)  
 120 W + 120 W<sup>1)</sup>  
 110 W + 110 W<sup>3)</sup>

Reference Power Output<sup>1)</sup>  
 (8 ohms 20 Hz – 20 kHz, THD 0.09%)  
 FRONT<sup>2)</sup>: 110 W/ch  
 CENTER<sup>2)</sup>: 110 W  
 SURR<sup>2)</sup>: 110 W/ch  
 SURR BACK<sup>2)</sup>: 110 W  
 (8 ohms 1 kHz, THD 0.7%)  
 FRONT<sup>2)</sup>: 120 W/ch  
 CENTER<sup>2)</sup>: 120 W  
 SURR<sup>2)</sup>: 120 W/ch  
 SURR BACK<sup>2)</sup>: 120 W  
 (8 ohms 1 kHz, THD 10%)  
 FRONT<sup>2)</sup>: 150 W/ch  
 CENTER<sup>2)</sup>: 150 W  
 SURR<sup>2)</sup>: 150 W/ch  
 SURR BACK<sup>2)</sup>: 150 W

1) Measured under the following conditions:

Area code	Power requirements
U, CA	120 V AC, 60 Hz
CEL, CEK, AR, KR	230 V AC, 50 Hz
E2/E3, AU	240 V AC, 50 Hz
TW	110 V AC, 60 Hz

2) Depending on the sound field settings and the source, there may be no sound output.

3) Measured under the following conditions:

Area code	Power requirements
AR, KR	220 V AC, 50 Hz

Frequency response

MULTI CH IN, SA-CD/ CD, MD/TAPE, DVD, VIDEO 1, 2, 3	10 Hz – 70 kHz +0.5/-2 dB (with sound field and tone bypassed)
---	--

Inputs (Analog)

MULTI CH IN, SA-CD/ CD, MD/TAPE, DVD, VIDEO 1, 2, 3	Sensitivity: 500 mV Impedance: 50 k ohms S/N <sup>4)</sup> : 96 dB (A, 500 mV <sup>5)</sup> )
---	--

4) INPUT SHORT (with sound field and tone bypassed).

5) Weighted network, input level.

**Inputs (Digital)**

DVD (Coaxial)	Sensitivity: – Impedance: 75 ohms S/N: 100 dB (A, 20 kHz LPF)
VIDEO 2, SA-CD/CD (Optical)	Sensitivity: – Impedance: – S/N: 100 dB (A, 20 kHz LPF)

**Outputs (Analog)**

MD/TAPE (OUT), VIDEO 1 (AUDIO OUT)	Voltage: 500 mV Impedance: 10 k ohms
SUB WOOFER	Voltage: 2 V Impedance: 1 k ohm

**Tone**

Gain levels	±6 dB, 1 dB step
-------------	------------------

**FM tuner section**

Tuning range	87.5 - 108.0 MHz
Antenna	FM wire antenna
Antenna terminals	75 ohms, unbalanced
Intermediate frequency	10.7 MHz
Sensitivity	
Mono:	18.3 dBf, 2.2 µV/75 ohms
Stereo:	38.3 dBf, 22.5 µV/75 ohms
Useable sensitivity	11.2 dBf, 1 µV/75 ohms
S/N	
Mono:	76 dB
Stereo:	70 dB
Harmonic distortion at 1 kHz	
Mono:	0.3%
Stereo:	0.5%
Separation	45 dB at 1 kHz
Frequency response	30 Hz – 15 kHz, +0.5/–2 dB
Selectivity	60 dB at 400 kHz

**AM tuner section**

Tuning range	
Models of area code U, CA	
With 10-kHz tuning scale:	530 – 1,710 kHz <sup>6)</sup>
With 9-kHz tuning scale:	531 – 1,710 kHz <sup>6)</sup>
Models of area code E2/E3	
With 10-kHz tuning scale:	530 – 1,610 kHz <sup>6)</sup>
With 9-kHz tuning scale:	531 – 1,602 kHz <sup>6)</sup>
Models of area code CEL, CEK, AU, TW, KR	
With 9-kHz tuning scale:	531 – 1,602 kHz
Models of area code AR	
With 10-kHz tuning scale:	530 – 1,610 kHz
Antenna	Loop antenna
Intermediate frequency	450 kHz
Usable sensitivity	50 dB/m (at 1,000 kHz or 999 kHz)
S/N	54 dB (at 50 mV/m)
Harmonic distortion	0.5% (50 mV/m, 400 Hz)
Selectivity	
At 9 kHz:	35 dB
At 10 kHz:	40 dB

- 6) You can change the AM tuning scale to 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. While holding down PRESET TUNING + or TUNING +, press I/⏮. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

**Video section**

Inputs/Outputs	
Video:	1 Vp-p, 75 ohms
COMPONENT VIDEO:	
(Except for models of area code CEL, CEK)	
Y:	1 Vp-p, 75 ohms
PB/CB/B-Y:	0.7 Vp-p, 75 ohms
Pr/Cr/R-Y:	0.7 Vp-p, 75 ohms
80 MHz HD Pass Through	

## General

### Power requirements

Area code	Power requirements
U, CA	120 V AC, 60 Hz
CEL, CEK	230 V AC, 50/60 Hz
AU	240 V AC, 50 Hz
AR, KR	220 – 230 V AC, 50/60 Hz
E2/E3	120/220/240 V AC, 50/60 Hz
TW	110 V AC, 50/60 Hz

### Power consumption

Area code	Power consumption
U, CEL, CEK, AU, KR, AR, E2/E3	220 W
CA	300 VA
TW	500 W

### Power consumption (during standby mode)

0.2 W

### Dimensions (w/h/d) (Approx.)

430 × 157.5 × 310 mm  
(16 7/8 × 6 2/8 × 12 2/8  
inches) including  
projecting parts and  
controls

### Mass (Approx.)

8.0 kg (17 lb 11 oz)

## Supplied accessories

FM wire antenna (1)

AM loop antenna (1)

Remote commander RM-AAU001 (1)

R6 (size-AA) batteries (2)


For details on the area code of the component you are using, see page 3.

Design and specifications are subject to change without notice.

# List of button locations and reference pages

## How to use this page

Use this page to find the location of buttons that are mentioned in the text.

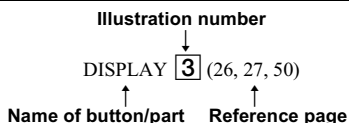

## Main unit

### ALPHABETICAL ORDER

#### A - H

A.F.D. (button/indicator) **11** (31, 33)  
AM **21** (22, 23, 24, 25, 41)  
DIMMER **4** (27)  
DISPLAY **3** (26, 27, 50)  
Display **7** (28)  
DVD **25** (22)  
ENTER **15** (17, 18, 41)  
FM **22** (22, 23, 24, 25, 41)  
FM MODE **32** (23)

#### I - O

Input buttons **20** (22, 36, 40, 41, 50)  
INPUT MODE **17** (36)

IR (receptor) **5** (44, 50)  
MAIN MENU **8** (18, 37, 38, 41)  
MASTER VOLUME +/- **16** (17, 21, 22, 49)  
MD/TAPE **24** (22)  
MEMORY **34** (24, 25)  
MOVIE (button/indicator) **12** (32, 33, 50)  
MULTI CHANNEL DECODING (indicator) **6** (23)  
MULTI CH IN **9** (23)  
MUSIC (button/indicator) **13** (33, 50)


#### P - Z

PHONES (jack) **33** (22, 49)  
PRESET TUNING +/- **29** (25, 53)

SA-CD/CD **23** (22)  
SPEAKERS (OFF/A/B/A+B) **2** (16, 42, 49)  
SURR BACK DECODING **14** (34)  
TUNING +/- **30** (23, 53)  
VIDEO 1 **28** (22)  
VIDEO 2 **27** (22)  
VIDEO 3 **26** (22)  
VIDEO 3 IN/PORTABLE AV IN (jacks) **31** (13)

### NUMBERS AND SYMBOLS

2CH (button/indicator) **10** (30, 33, 38)  
I/⏻ (power) **1** (17, 18, 24, 38, 53)  
</> **19** (18, 37, 38, 41)  
+/- **18** (18, 37, 39, 41)

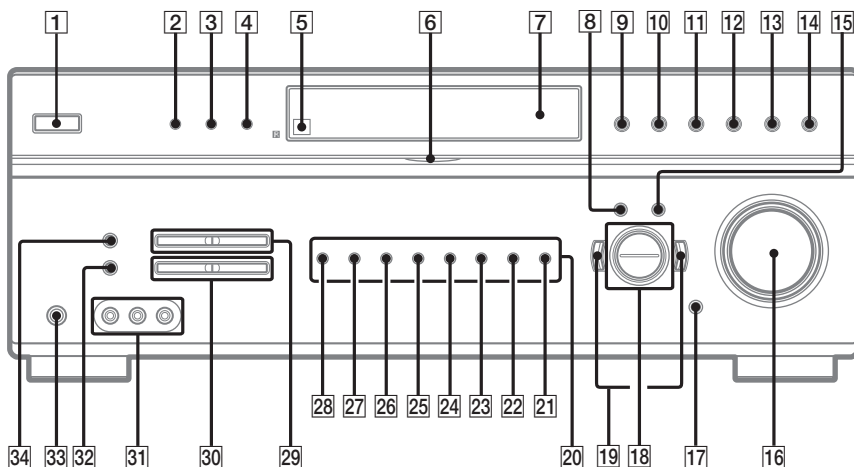

# Index

## A

- Adjusting
  - CUSTOMIZE parameters 39
  - LEVEL parameters 37
  - SET UP parameters 18
  - speaker levels and balance 21
  - TONE parameters 38
- Automatic tuning 23

## C

- Changing
  - display 27
- Clearing receiver's memory 17
- CUSTOMIZE menu 39

## D

- Digital Cinema Sound 32
- Direct tuning 24
- Dual Mono 40
- Dubbing. *See* Recording

## E

- Editing. *See* Recording

## I

- Indexing. *See* Naming

## L

- Labeling. *See* Naming
- LEVEL menu 37

## N

- Naming 41

## P

- Preset stations
  - how to 25
  - how to tune 25

## R

- RDS 26
- Recording
  - on a video tape 43
  - on an audio tape or MD 43
- Remote commander 44–47

## S

- Selecting
  - component 22
  - sound field 32–33
  - speaker system 42
- SET UP menu 18
- Sleep Timer 42
- Sound field
  - customizing 37
  - pre-programmed 32–33
  - resetting 38
  - selecting 32–33
- Speaker crossover frequency 21
- Speakers
  - adjusting speaker levels and balance 21
  - connection 15
  - placement 15
- Supplied accessories 54

## T

- Test tone 21
- TONE menu 38
- Tuning
  - automatically 23
  - directly 24
  - to preset stations 25